


## PARTS LIST - XG-09FM2106E

BOLT KIT - XG-BRK3

### COMPATIBLE GUARDS

- XG-B100, XG-125, XG-150
- LT-325, LT-350
- HD-400, HD-425, HD-450

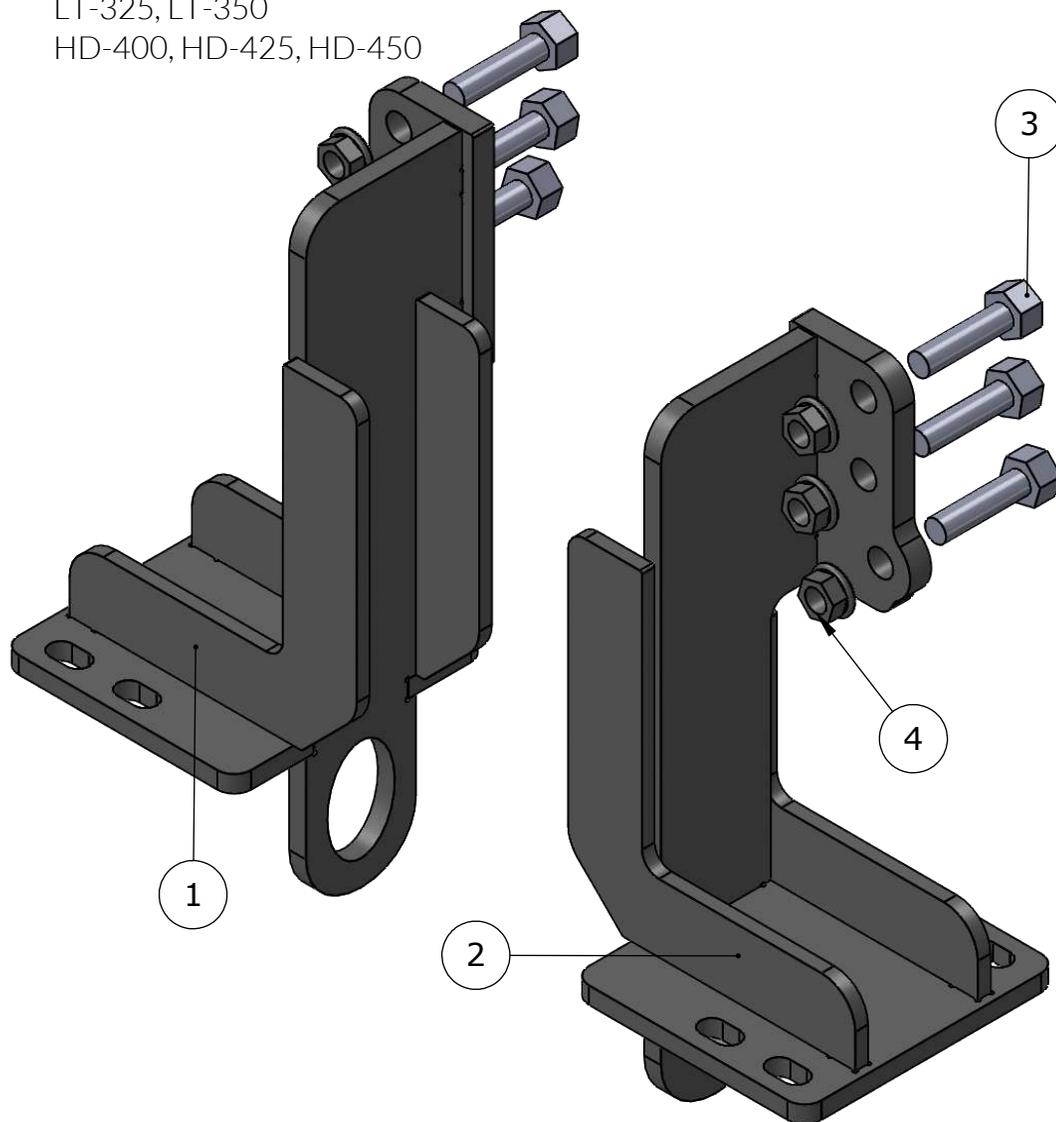


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	XG-09FM2106E-BR10DR	MOUNTING BRACKET (LHS)	1
2	XG-09FM2106E-BR10PS	MOUNTING BRACKET (RHS)	1
3	XG-001-62C250HCS8Y	5/8-11X2 1/2" HEX CAP GR8 Z&Y	6
4	XG-001-62CNWF0Z_HARD	5/8-11 Serr FlangeLn Hard ZINC	6

**ATTENTION!! Any Ex-Guard grille guard, bracket kit, or hardware must be used with corresponding Ex-Guard components. Use of any other product or brand with Ex-Guard products will immediately void the warranty provided by Ex-Guard Industries.**

# MOUNTING INSTRUCTIONS - XG-09FM2106E MT

FREIGHTLINER M2 106 WITH EXTENDED BUMPER '09-CURRENT

## FRONT VIEW

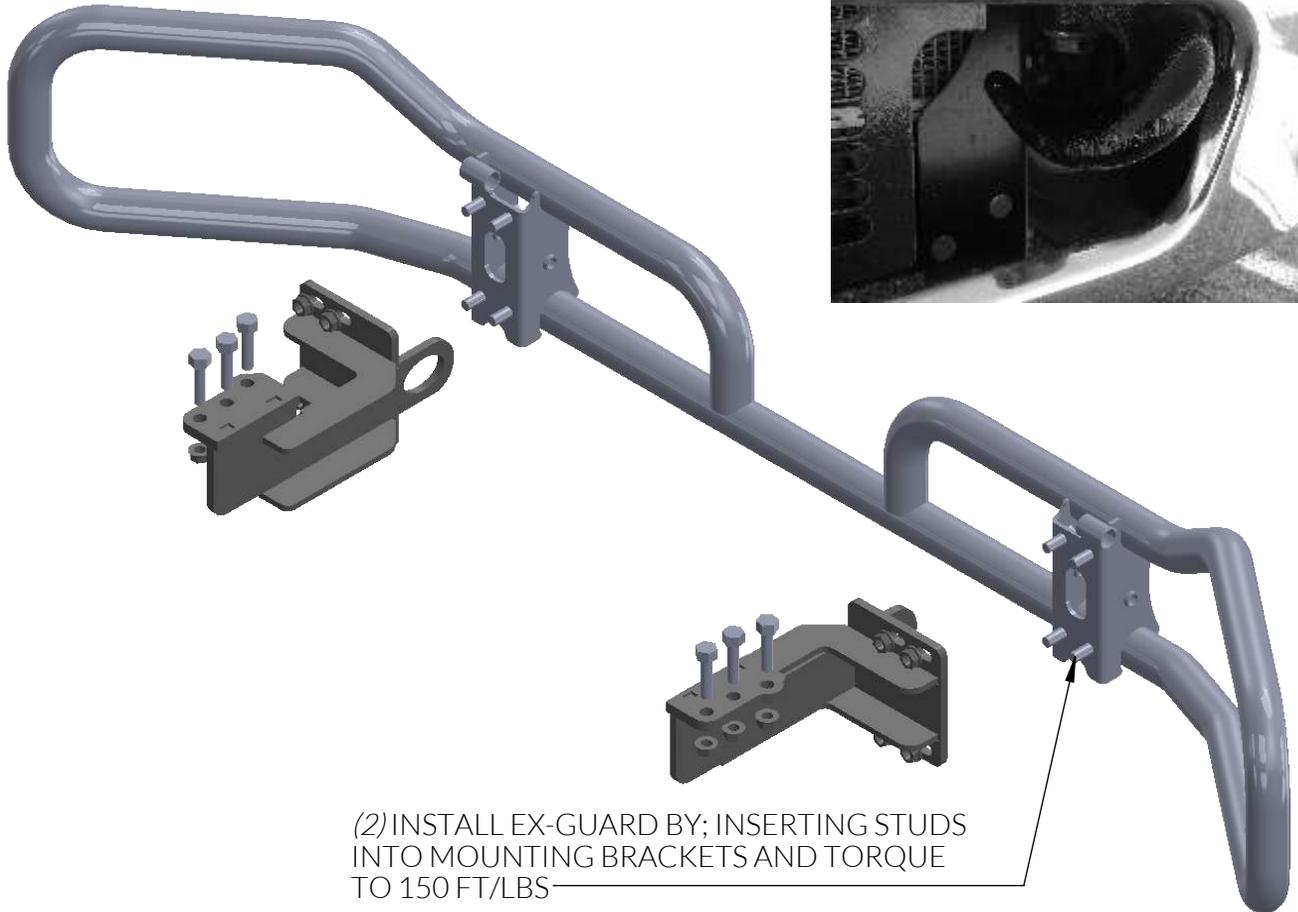

(2) INSTALL EX-GUARD BY; INSERTING STUDS INTO MOUNTING BRACKETS AND TORQUE TO 150 FT/LBS



(1) REMOVE TOW HOOKS BY REMOVING 4 BOLTS PER SIDE AND INSTALLING BRACKETS AS SHOWN USING 3 BOLTS SUPPLIED. TORQUE TO 150 FT/LBS

**IMPORTANT!!** Any Ex-Guard grille guard, bracket kit, or hardware must be used with corresponding Ex-Guard components. Use of any other product or brand with Ex-Guard products will immediately void the warranty provided by Ex-Guard Industries.