


PARTS LIST - XG-13FCAHP

COMPATIBLE GUARDS

- XG-B100, XG-125, XG-150, XG-195
- LT-325, LT-350
- HD-400, HD-425, HD-450, HD-495

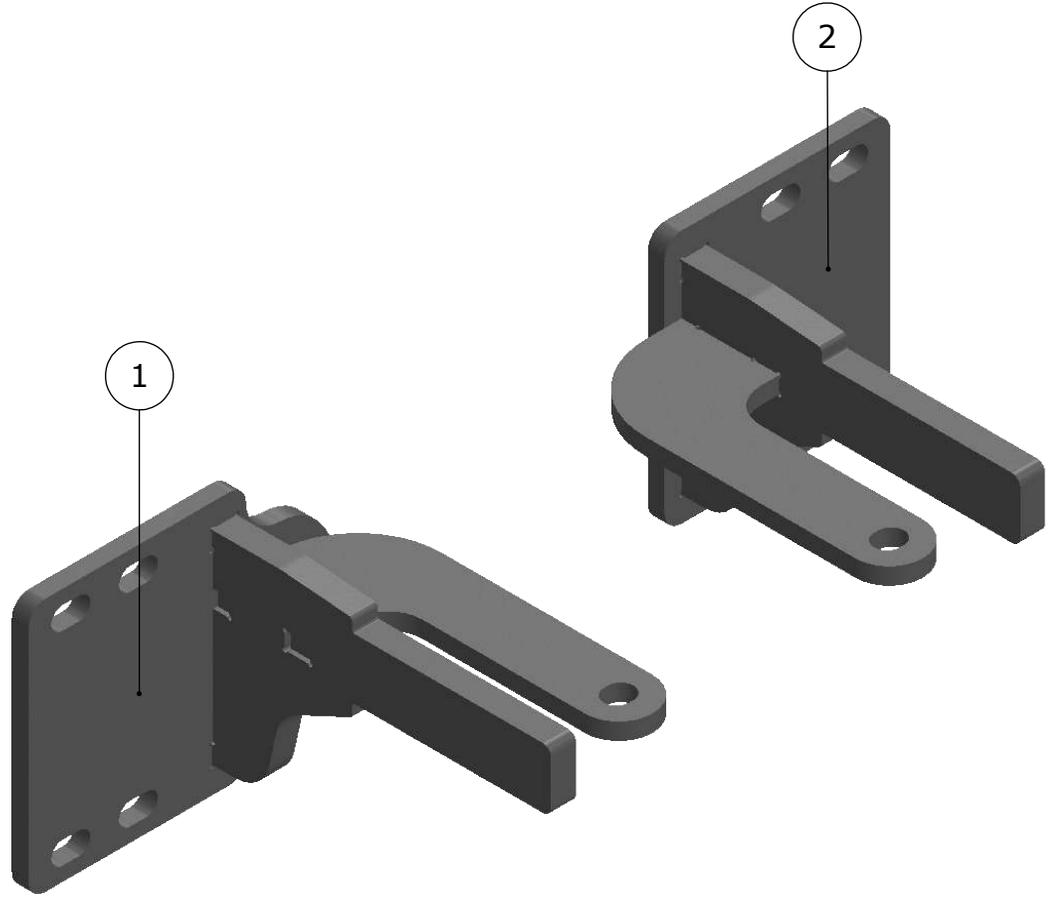

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	XG-13FCAHP-BR10DR	MOUNTING BRACKET RHS	1
2	XG-13FCAHP-BR10PS	MOUNTING BRACKET LHS	1

ATTENTION!! Any Ex-Guard grille guard, bracket kit, or hardware must be used with corresponding Ex-Guard components. Use of any other product or brand with Ex-Guard products will immediately void the warranty provided by Ex-Guard Industries.

MOUNTING INSTRUCTIONS - XG-13FCAHP MT INS


FREIGHTLINER CASCADIA W/ LOWER TOW HOOKS

888.902.2777 / INFO@EX-GUARD.COM

CALL FOR INSTALLATION QUESTIONS

EX-GUARD[®]

DRIVER SIDE BRACKET

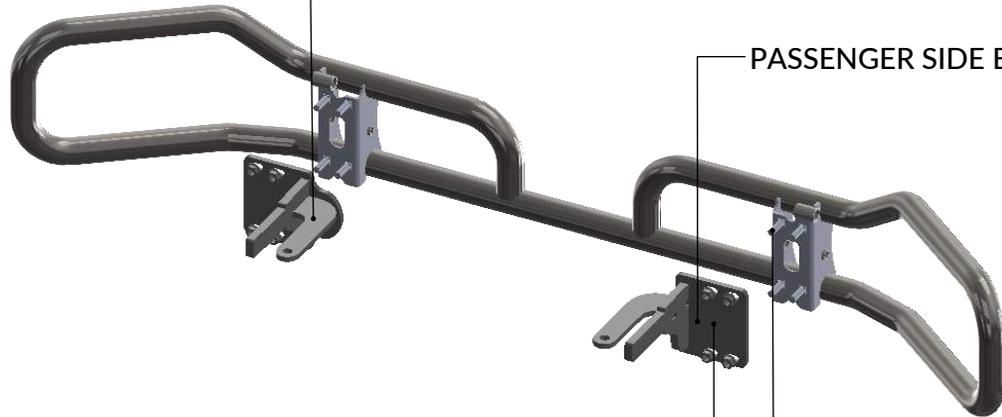

PASSENGER SIDE BRACKET

(1) INSERT BRACKETS INTO TOW HOOK RECEIVERS IN TRUCK. THEN INSERT BOLT TO SECURE INTO PLACE. TORQUE TO 150 FT/LBS

(2) INSERT 5/8 STUD INTO BRACKET SLOTS, INSTAL FLANGE NUTS, TORQUE TO 150 FT/LBS.

IMPORTANT!! Any Ex-Guard grille guard, bracket kit, or hardware must be used with corresponding Ex-Guard components. Use of any other product or brand with Ex-Guard products will immediately void the warranty provided by Ex-Guard Industries.