


PARTS LIST - XG-18FCAE

BOLT KIT - XG-BRK6

COMPATIBLE GUARDS

- XG-B100, XG-125, XG-150, XG-195
- LT-325, LT-350
- HD-400, HD-425, HD-450, HD-495

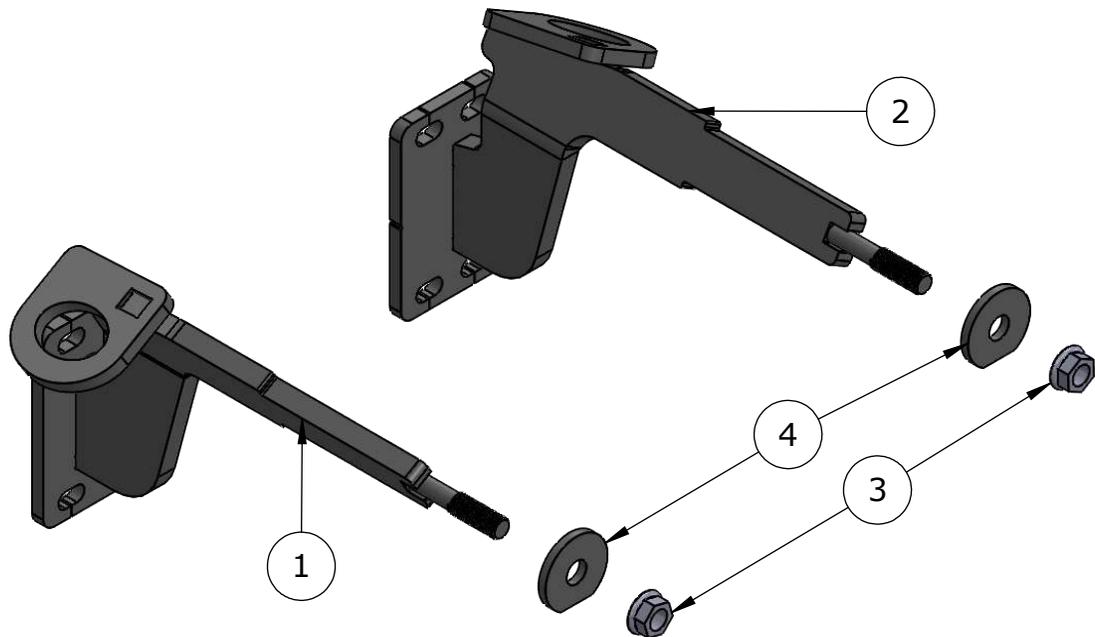

ITEM NO.	PART NUMBER	DESCRIPTION	Default/QTY.
1	XG-18FCAE-BR10L	MOUNTING BRACKET DR	1
2	XG-18FCAE-BR10R	MOUNTING BRACKET PS	1
3	XG-001-75CNUF0Z	3/4-10 AUTOMATION FLG LN GR8 ZINC WITH TOP COAT	2
4	XG-001-75W	BACK UP WASHER	2

ATTENTION!! Any Ex-Guard grille guard, bracket kit, or hardware must be used with corresponding Ex-Guard components. Use of any other product or brand with Ex-Guard products will immediately void the warranty provided by Ex-Guard Industries.

MOUNTING INSTRUCTIONS - XG-18FCAE MT

FREIGHTLINER NEW GENERATION CASCADIA CHROME CLAD BUMPER

888.902.2777 / INFO@EX-GUARD.COM

CALL FOR INSTALLATION QUESTIONS




(1) INSERT THIS END INTO THE TOWHOOK RECEIVER, AS SEEN BELOW. PUT WASHER OVER BOLT, INSTALL NUT TORQUE TO 230 FT LBS.

(2) INSTALL THE EX-GUARD BY INSERTING THE 5/8" STUDS INTO THE BRACKET SLOTS, INSTALL FLANGE NUTS, TORQUE TO 150 FT LBS.

FRONT LOCATION

BACK SIDE OF RECEIVER

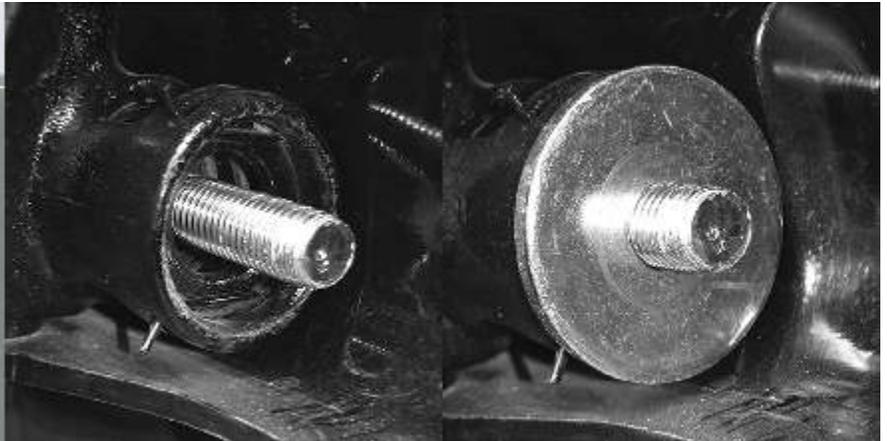

IMPORTANT!! Any Ex-Guard grille guard, bracket kit, or hardware must be used with corresponding Ex-Guard components. Use of any other product or brand with Ex-Guard products will immediately void the warranty provided by Ex-Guard Industries.

EX-GUARD