


# MOUNTING INSTRUCTIONS - XG-24P579 MT



CALL: (888) 902-2777 FOR INSTALLATION QUESTIONS OR EMAIL: [INFO@EX-GUARD.COM](mailto:INFO@EX-GUARD.COM)

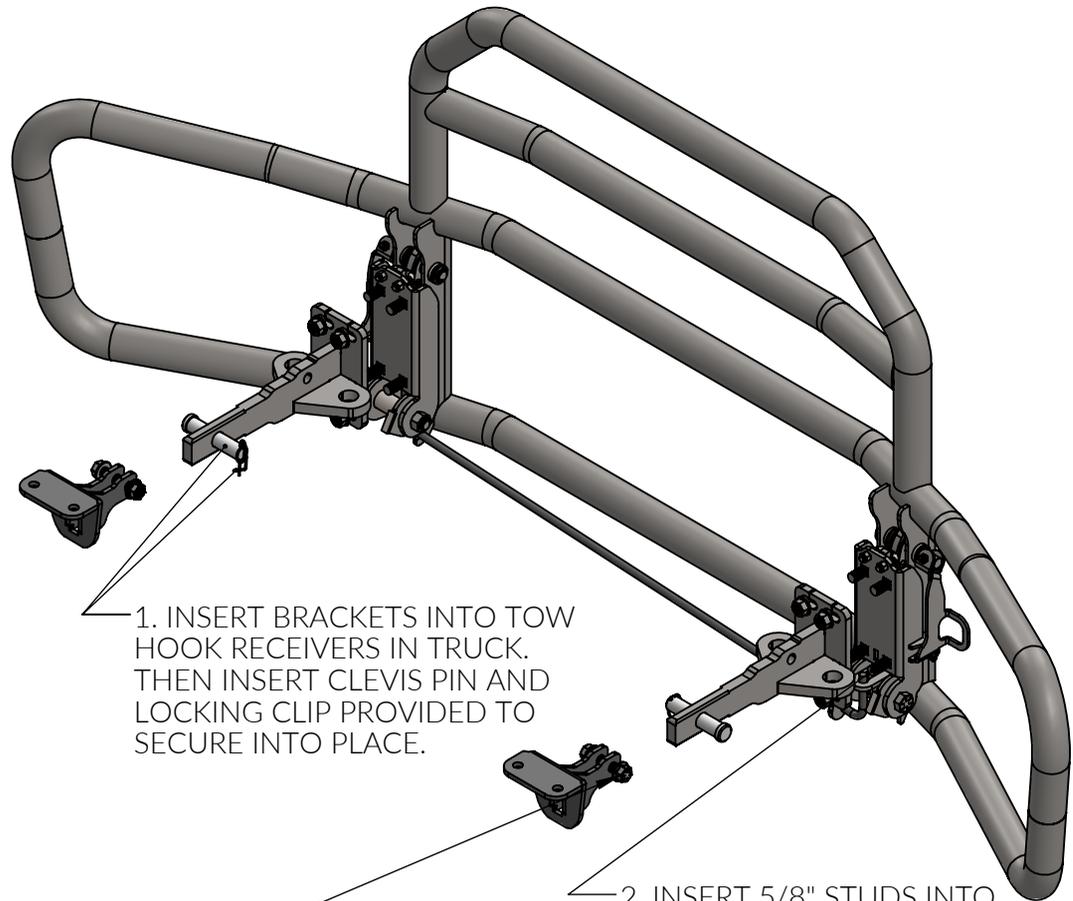

1. INSERT BRACKETS INTO TOW HOOK RECEIVERS IN TRUCK. THEN INSERT CLEVIS PIN AND LOCKING CLIP PROVIDED TO SECURE INTO PLACE.

2. INSERT 5/8" STUDS INTO BRACKET SLOTS. INSTALL FLANGE NUTS AND TORQUE TO 150 FT/LBS

3. INSTALL BOLT THROUGH TOP BRACKET SUPPORT AND RECEIVER BRACKETS AND TORQUE TO 225FT/LBS



**IMPORTANT!!** Any Ex-Guard grille guard, bracket kit, or hardware must be used with corresponding Ex-Guard components. Use of any other product or brand with Ex-Guard products will immediately void the warranty provided by Ex-Guard Industries.


© THIS DRAWING IS THE PROPERTY OF EX-GUARD INDUSTRIES, INC. COPYRIGHT IS RESERVED BY THEM AND THE DRAWING ISSUED ON CONDITION THAT IT MUST NOT BE USED FOR ANY OTHER PURPOSE OTHER THAN FOR WHICH IT WAS SUPPLIED AND NOT TO BE COPIED, REPRODUCED, RETAINED OR DISCLOSED TO ANY UNAUTHORIZED PERSON EITHER WHOLLY OR IN PART WITHOUT THE CONSENT IN WRITING OF EX-GUARD INDUSTRIES INC.

## PARTS LIST - XG-24P579

BOLT KIT - XG-BRK23 & XG-BRK25

COMPATIBLE GUARDS

- Check <https://ex-guard.com/>

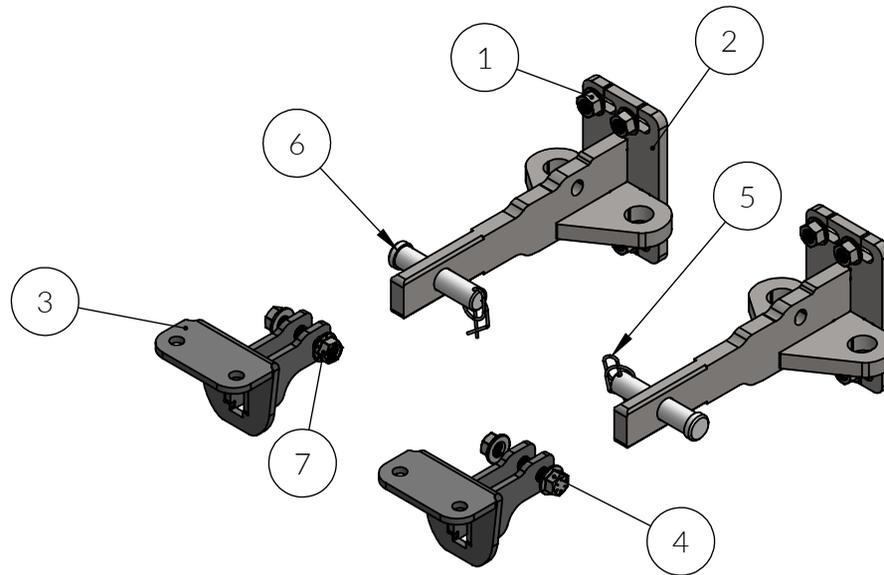

CALL: (888) 902-2777 FOR INSTALLATION QUESTIONS OR EMAIL: [INFO@EX-GUARD.COM](mailto:INFO@EX-GUARD.COM)



ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	XG-001-62-11FHHNL5Z	5/8-11 FLANGE PATCH HEX NUT	8
2	XG-24P579-BR10	MOUNTING BRACKET	2
3	XG-24KP-BR08	TOP SUPPORT BRACE	2
4	XG-001-62-11FHHHC2258ZY	5/8"-11 X 2 1/4" FLANGE HEX HEAD CAPSCREW	2
5	XG-001-100-LCPSP	1" LOCKING COTTER PIN	2
6	XG-001-100-CP4505Z	1" X 4 1/2" CLEVIS PIN	2
7	XG-001-62-11FHHNTL8ZY	5/8"-11 TOP LOCK FLANGE HEX NUT	2

**ATTENTION!!** Any Ex-Guard grille guard, bracket kit, or hardware must be used with corresponding Ex-Guard components. Use of any other product or brand with Ex-Guard products will immediately void the warranty provided by Ex-Guard Industries.