

MOUNTING INSTRUCTIONS - XG-25FM2106E MT




CALL: (888) 902-2777 FOR INSTALLATION QUESTIONS OR EMAIL: INFO@EX-GUARD.COM



2. INSTALL EX-GUARD BY;
INSERTING STUDS
INTO MOUNTING
BRACKETS AND TORQUE
TO 150 FT/LBS



FRONT VIEW

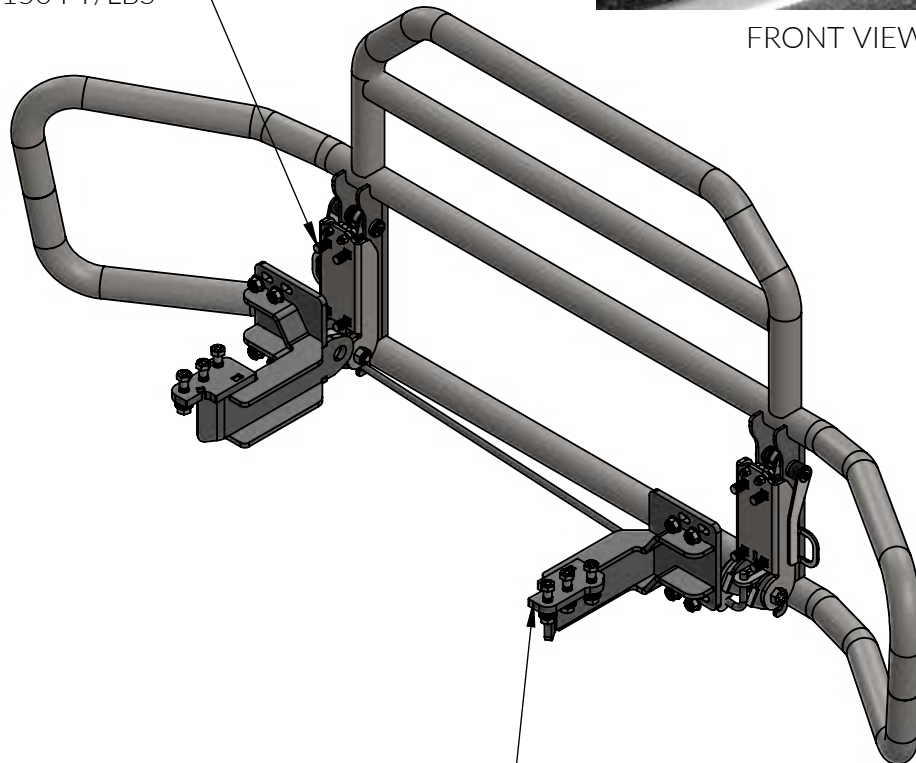

TOW HOOK



1. REMOVE TOW HOOKS
BY REMOVING 4 BOLTS
PER SIDE AND INSTALLING
BRACKETS AS SHOWN USING
3 BOLTS SUPPLIED.
TORQUE TO 150 FT/LBS

IMPORTANT!! Any Ex-Guard grille guard, bracket kit, or hardware must be used with corresponding Ex-Guard components. Use of any other product or brand with Ex-Guard products will immediately void the warranty provided by Ex-Guard Industries.


© THIS DRAWING IS THE PROPERTY OF EX-GUARD INDUSTRIES, INC. COPYRIGHT IS RESERVED BY THEM AND THE DRAWING ISSUED ON CONDITION THAT IT MUST NOT BE USED FOR ANY OTHER PURPOSE OTHER THAN FOR WHICH IT WAS SUPPLIED AND NOT TO BE COPIED, REPRODUCED, RETAINED OR DISCLOSED TO ANY UNAUTHORIZED PERSON EITHER WHOLLY OR IN PART WITHOUT THE CONSENT IN WRITING OF EX-GUARD INDUSTRIES INC.

PARTS LIST - XG-25FM2106E

BOLT KIT - XG-BRK3 & XG-BRK23

COMPATIBLE GUARDS

- Check <https://ex-guard.com/>

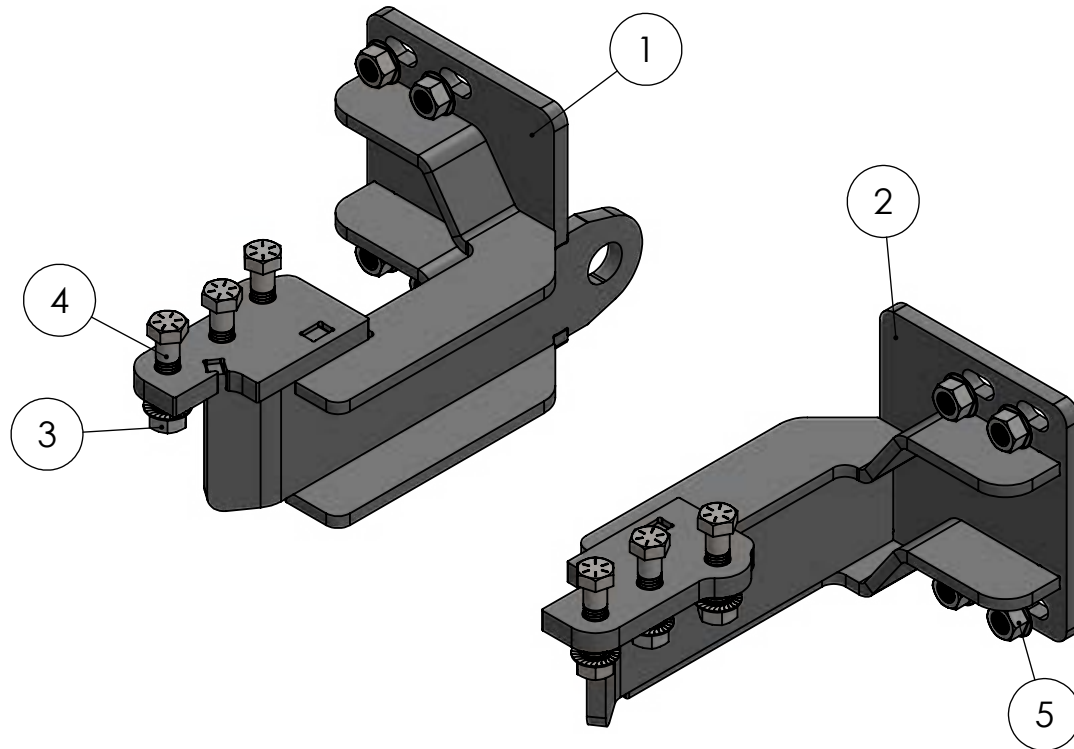

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	XG-25FM2106E-BR10DR	MOUNTING BRACKET (DR)	1
2	XG-25FM2106E-BR10PS	MOUNTING BRACKET (PS)	1
3	XG-001-62-11SFHNN5Z	5/8"-11 SERRATED FLANGE HEX NUT	6
4	XG-001-62-11HHC2508ZY	5/8-11 X 2 1/2" HEX HEAD CAPSCREW	6
5	XG-001-62-11FHHNL5Z	5/8-11 FLANGE PATCH HEX NUT	8

ATTENTION!! Any Ex-Guard grille guard, bracket kit, or hardware must be used with corresponding Ex-Guard components. Use of any other product or brand with Ex-Guard products will immediately void the warranty provided by Ex-Guard Industries.



CALL: (888) 902-2777 FOR INSTALLATION QUESTIONS OR EMAIL: INFO@EX-GUARD.COM

