




CALL: (888) 902-2777 FOR INSTALLATION QUESTIONS OR EMAIL: INFO@EX-GUARD.COM

PARTS LIST - XG-04INT8

BOLT KIT - XG-BRK4

COMPATIBLE GUARDS

- XG-B100, XG-125, XG-150, XG-195
- LT-325, LT-350
- HD-400, HD-425, HD-450, HD-495

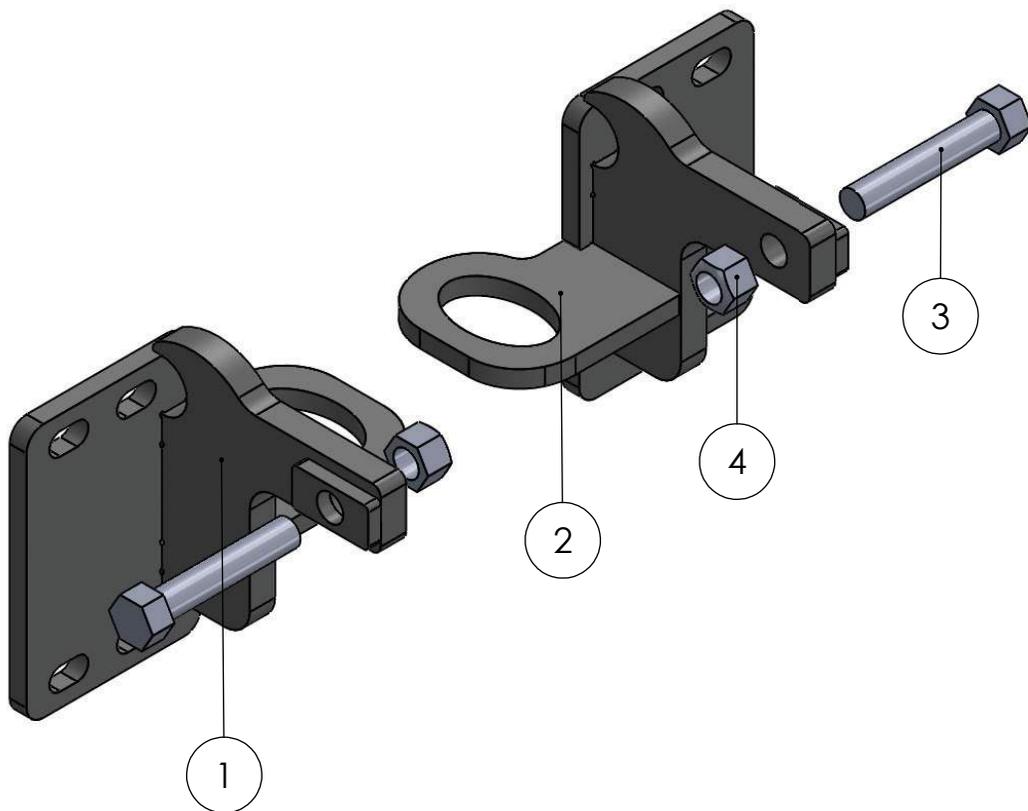

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	XG-04INT8-BR10DR	MOUNTING PLATE (LHS)	1
2	XG-04INT8-BR10PS	MOUNTING BRACKET (RHS)	1
3	XG-001-75C400HCS8Y	3/4-10X4" Hex Cap GR8 YELLOW	2
4	XG-001-75CNUC0Z	3/4-10 AUTOMATION L/N GR.C ZINC	2

ATTENTION!! Any Ex-Guard grille guard, bracket kit, or hardware must be used with corresponding Ex-Guard components. Use of any other product or brand with Ex-Guard products will immediately void the warranty provided by Ex-Guard Industries.

© THIS DRAWING IS THE PROPERTY OF EX-GUARD INDUSTRIES, INC. COPYRIGHT IS RESERVED BY THEM AND THE DRAWING ISSUED ON CONDITION THAT IT MUST NOT BE USED FOR ANY OTHER PURPOSE OTHER THAN FOR WHICH IT WAS SUPPLIED AND NOT TO BE COPIED, REPRODUCED, RETAINED OR DISCLOSED TO ANY UNAUTHORIZED PERSON EITHER WHOLLY OR IN PART WITHOUT THE CONSENT IN WRITING OF EX-GUARD INDUSTRIES INC.






CALL: (888) 902-2777 FOR INSTALLATION QUESTIONS OR EMAIL: INFO@EX-GUARD.COM

MOUNTING INSTRUCTIONS - XG-04INT8 MT

INTERNATIONAL TRANSTAR / 8600 SERIES -
FLUSH MOUNT BUMPER

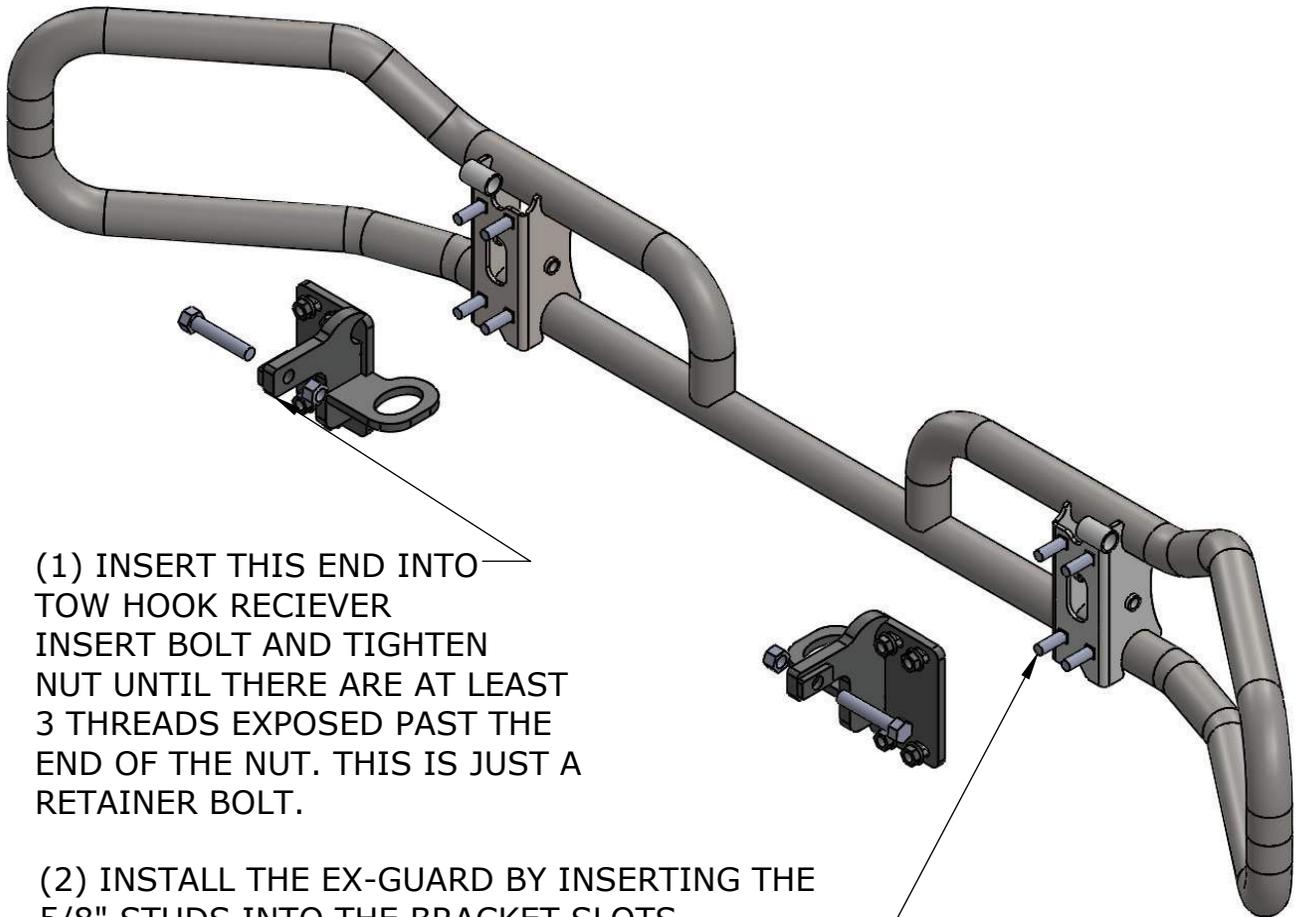

(1) INSERT THIS END INTO
TOW HOOK RECIEVER
INSERT BOLT AND TIGHTEN
NUT UNTIL THERE ARE AT LEAST
3 THREADS EXPOSED PAST THE
END OF THE NUT. THIS IS JUST A
RETAINER BOLT.

(2) INSTALL THE EX-GUARD BY INSERTING THE
5/8" STUDS INTO THE BRACKET SLOTS,
INSTALL FLANGE NUTS, TORQUE TO 150/LBS.

IMPORTANT!! Any Ex-Guard grille guard, bracket kit, or hardware must be used with corresponding Ex-Guard components. Use of any other product or brand with Ex-Guard products will immediately void the warranty provided by Ex-Guard Industries.