




CALL: (888) 902-2777 FOR INSTALLATION QUESTIONS OR EMAIL: INFO@EX-GUARD.COM

PARTS LIST - XG-10FCOR

BOLT KIT - XG-BRK8 (x2)

COMPATIBLE GUARDS

- XG-B200, XG-225, XG-250

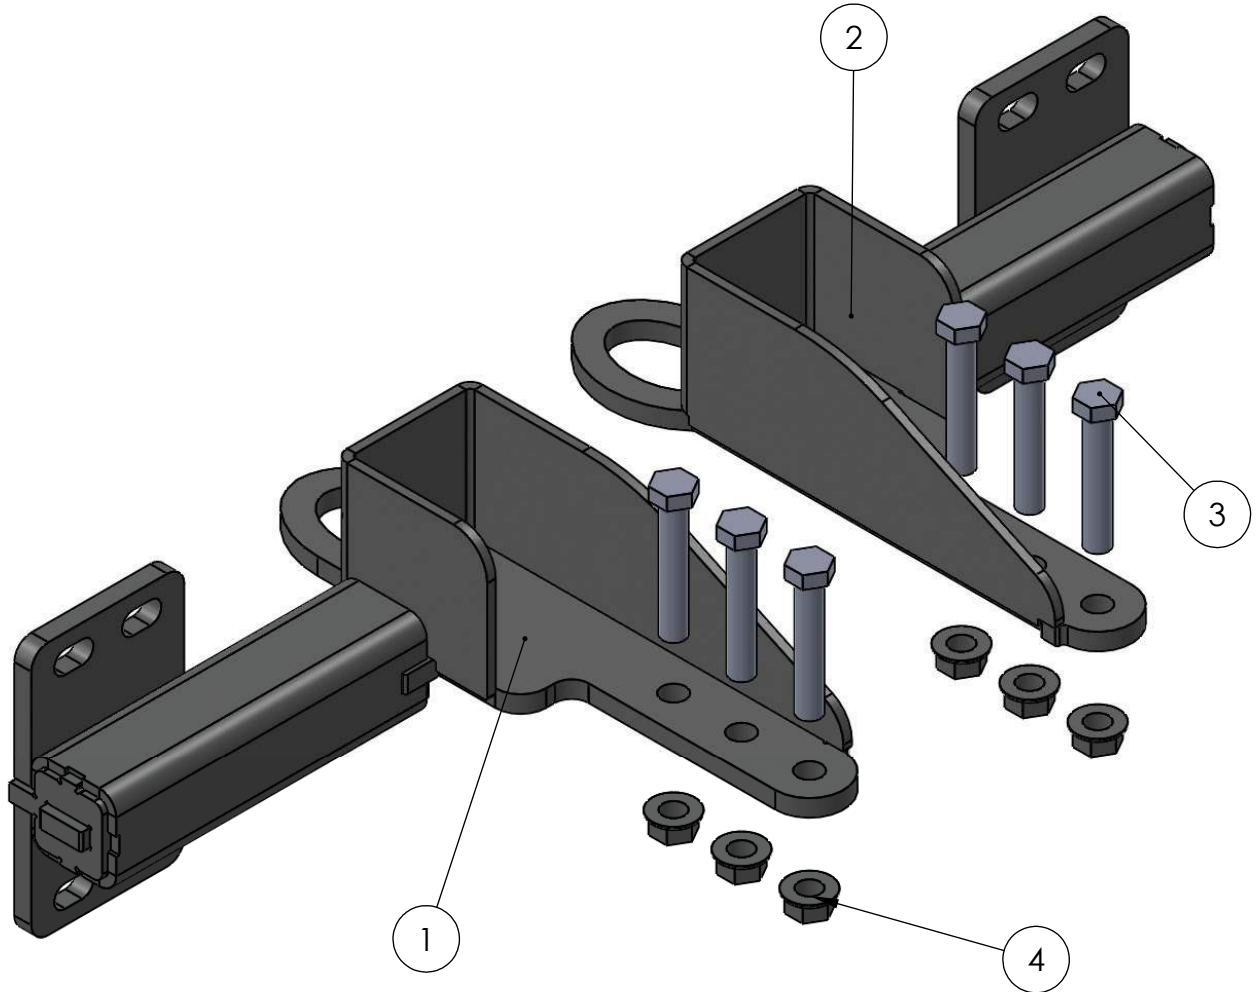

| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|----------------------|--------------------------------|------|
| 1 | XG-10FCOR-BR10DR | MOUNTING BRACKET (LHS) | 1 |
| 2 | XG-10FCOR-BR10PS | MOUNTING BRACKET (RHS) | 1 |
| 3 | XG-001-62C350HCS8Y | 5/8-11X3 1/2 Hex CapGR8 Z&Y | 6 |
| 4 | XG-001-62CNWF0Z_HARD | 5/8-11 Serr FlangeLn Hard ZINC | 6 |

ATTENTION!! Any Ex-Guard grille guard, bracket kit, or hardware must be used with corresponding Ex-Guard components. Use of any other product or brand with Ex-Guard products will immediately void the warranty provided by Ex-Guard Industries.

© THIS DRAWING IS THE PROPERTY OF EX-GUARD INDUSTRIES, INC. COPYRIGHT IS RESERVED BY THEM AND THE DRAWING ISSUED ON CONDITION THAT IT MUST NOT BE USED FOR ANY OTHER PURPOSE OTHER THAN FOR WHICH IT WAS SUPPLIED AND NOT TO BE COPIED, REPRODUCED, RETAINED OR DISCLOSED TO ANY UNAUTHORIZED PERSON EITHER WHOLLY OR IN PART WITHOUT THE CONSENT IN WRITING OF EX-GUARD INDUSTRIES INC.




MOUNTING INSTRUCTIONS - XG-10FCOR MT

FREIGHTLINER CORONADO SET FORWARD AXLE
2010 - CURRENT

CALL: (888) 902-2777 FOR INSTALLATION QUESTIONS OR EMAIL: INFO@EX-GUARD.COM


FRONT VIEW

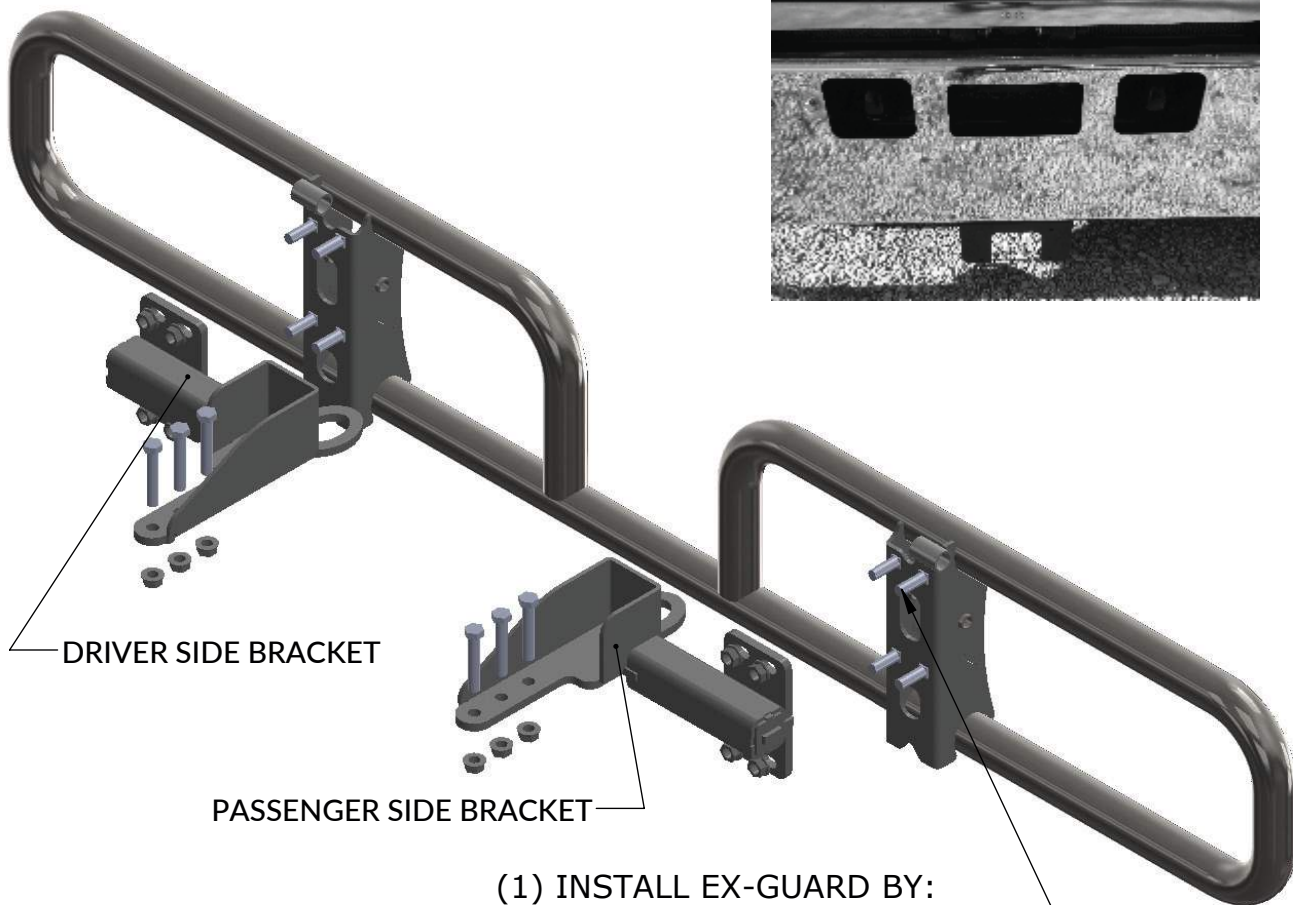

DRIVER SIDE BRACKET

PASSENGER SIDE BRACKET

(1) INSTALL EX-GUARD BY:
INSERTING STUDS INTO
MOUNTING BRACKET SLOTS
AND TORQUE TO 150 FT/LBS

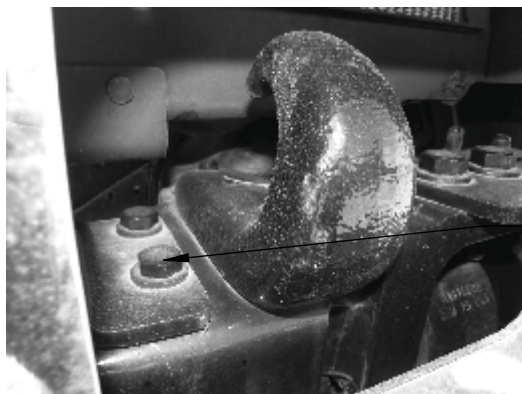

(1) LOCATE FRONT TOW HOOKS
AND REMOVE, INSTALL BRACKETS
AS SHOWN USING BOLTS SUPPLIED
TORQUE TO 150 FT/LBS

IMPORTANT!! Any Ex-Guard grille guard, bracket kit, or hardware must be used with corresponding Ex-Guard components. Use of any other product or brand with Ex-Guard products will immediately void the warranty provided by Ex-Guard Industries.

