


PARTS LIST - XG-18DMA

BOLT KIT - XG-BRK13

COMPATIBLE GUARDS

XG-DB100, XG-D125, XG-D175

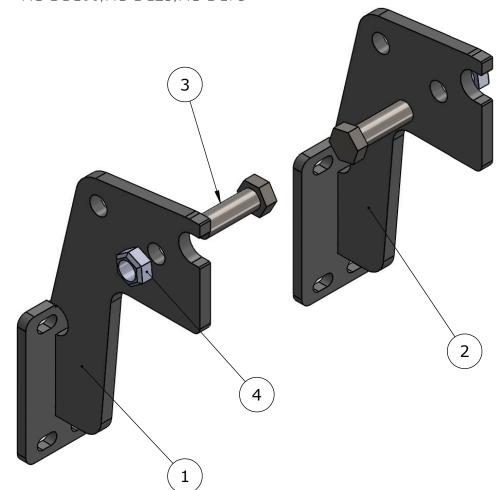



ITEM NO.	PART NUMBER	DESCRIPTION	Default/ QTY.
1	XG-18DMA-BR10DR	MOUNTING BRACKET (LH)	1
2	XG-18DMA-BR10PS	MOUNTING BRACKET (RH)	1
3	XG-001- 100C300HCS8Y	1-8X3 1/2' Hex Cap GR8 Z&Y	2
4	XG-001-100CNUC0Z	1-8 AUTOMATION L/N GR. C ZINC	2

ATTENTION!! Any Ex-Guard grille guard, bracket kit, or hardware must be used with corresponding Ex-Guard components. Use of any other product or brand with Ex-Guard products will immediately void the warranty provided by Ex-Guard Industries.




MOUNTING INSTRUCTIONS - XG-18DMA MT

MACK ANTHEM

(1) LOCATE AND REMOVE THE CLEVIS TOW LOOP, BY; REMOVING THE FOUR NUTS AS SEEN IN THE PICTURES BELOW. PULL THE BUMPER FORWARD AND REMOVE THE COTTER PIN AND PULL THE 1 INCH PIN OUT OF THE CLEVIS. SAVE CLEVIS FOR TOWING, BY REATTACHING TO MOUNTING BRACKET. REPEAT FOR OTHER SIDE.


Inside the bumper

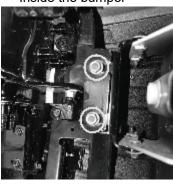

In front of the bumper



(2) INSTALL THE MOUNTING BRACKETS AS SHOWN BELOW BY POSITIONING ON THE OUTSIDE OF THE FRAME, BACK OF BRACKET SHOULD REST AGAINST THE BUMPER BRACKET RIVITED TO THE FRAME.

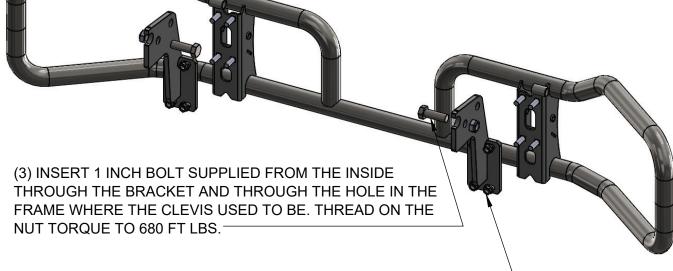



(4) INSTALL EX-GUARD BY: INSERTING STUDS INTO MOUNTING BRACKETS AND TORQUE TO 180 FT/LBS

IMPORTANT!! Any Ex-Guard grille guard, bracket kit, or hardware must be used with corresponding Ex-Guard components. Use of any other product or brand with Ex-Guard products will immediately void the warranty provided by Ex-Guard Industries.