


## MOUNTING INSTRUCTIONS - XG-99MC MT RFV1

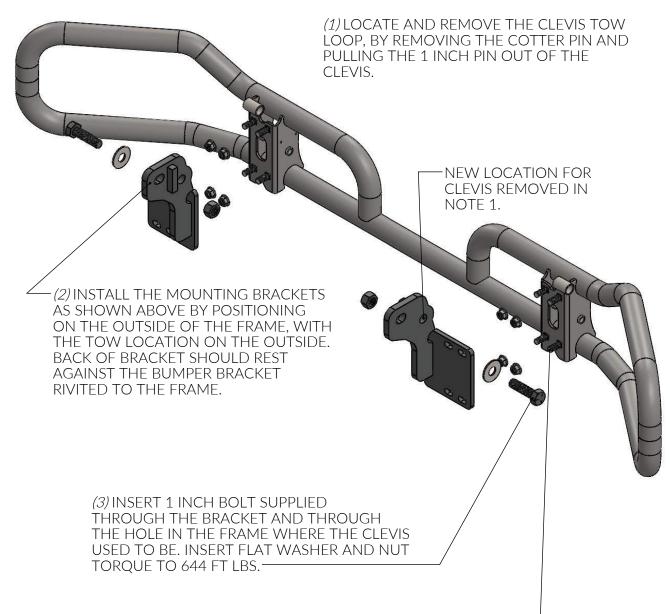



TORQUE TO 150 FT/LBS

(4) INSTALL EX-GUARD BY: INSERTING STUDS INTO MOUNTING BRACKETS AND








## PARTS LIST - XG-99MC REV1

## BOLT KIT - XG-BRK2 & XG-BRK23

## **COMPATIBLE GUARDS**

• Check https://ex-guard.com/

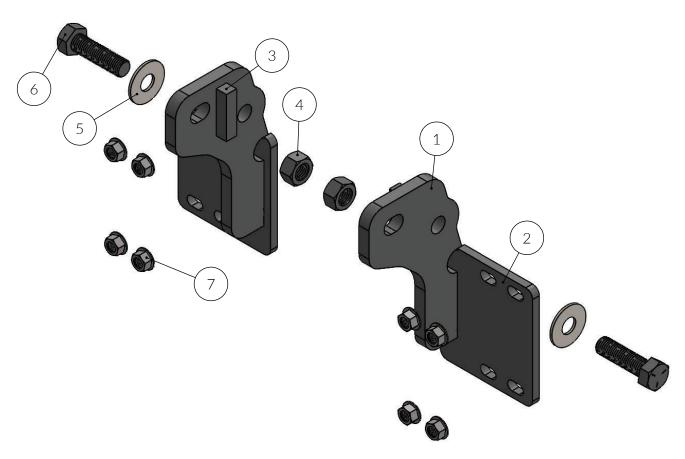

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	XG-99MC-BR01 REV1	TOW HOOK MOUNT	2
2	XG-99MC-BR02	MOUNTING PLATE	2
3	XG-99MC-BR03	LOCKING PLATE	2
4	XG-001-100CNUC0Z	1-8 HEX NUT	2
5	XG-001-100NWMC0Y	1' USS MIL-CARB WASHER	2
6	XG-001-100C350HCS8Y	1-8 X 3.5 HEX HEAD BOLT	2
7	XG-001-62CNWF0Z_HARD	5/8-11 FLANGE AUTO LOCKNUT	8



ATTENTION!! Any Ex-Guard grille guard, bracket kit, or hardware must be used with corresponding Ex-Guard components. Use of any other product or brand with Ex-Guard products will immediately void the warranty provided by Ex-Guard Industries.