




CALL: (888) 902-2777 FOR INSTALLATION QUESTIONS OR EMAIL: INFO@EX-GUARD.COM

PARTS LIST - XG-99VNE

COMPATIBLE GUARDS

- XG-B100, XG-125, XG-150, XG-195
- LT-325, LT-350
- HD-400, HD-425, HD-450, HD-495

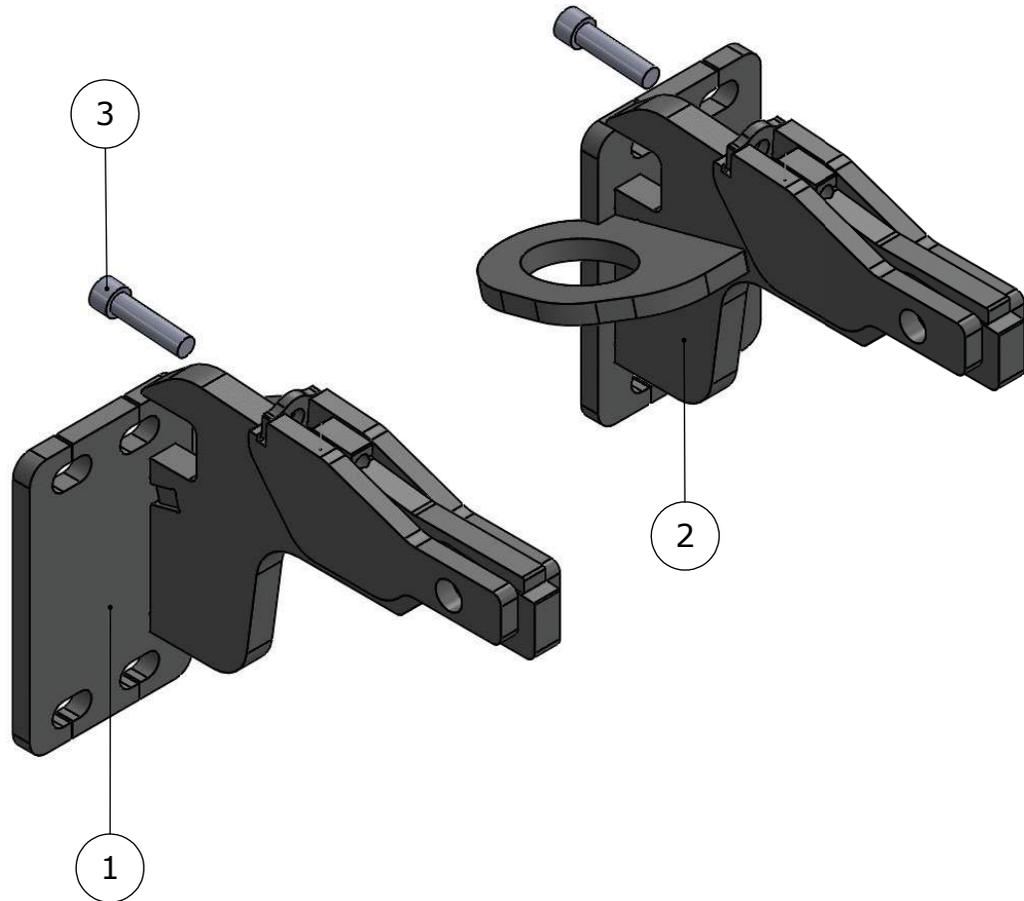

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	XG-99VNE-BR10DR	MOUNTING BRACKET (RHS)	1
2	XG-99VNE-BR10PS	MOUNTING BRACKET (RHS)	1
3	XG-001-50C200KCS0Z	1/2-13 X 2.00 SOC CAP SCREW	2

ATTENTION!! Any Ex-Guard grille guard, bracket kit, or hardware must be used with corresponding Ex-Guard components. Use of any other product or brand with Ex-Guard products will immediately void the warranty provided by Ex-Guard Industries.


© THIS DRAWING IS THE PROPERTY OF EX-GUARD INDUSTRIES, INC. COPYRIGHT IS RESERVED BY THEM AND THE DRAWING ISSUED ON CONDITION THAT IT MUST NOT BE USED FOR ANY OTHER PURPOSE OTHER THAN FOR WHICH IT WAS SUPPLIED AND NOT TO BE COPIED, REPRODUCED, RETAINED OR DISCLOSED TO ANY UNAUTHORIZED PERSON EITHER WHOLLY OR IN PART WITHOUT THE CONSENT IN WRITING OF EX-GUARD INDUSTRIES INC.



MOUNTING INSTRUCTIONS - XG-99VNE MT

VOLVO VNL (2004 - 2017)

CALL: (888) 902-2777 FOR INSTALLATION QUESTIONS OR EMAIL: INFO@EX-GUARD.COM

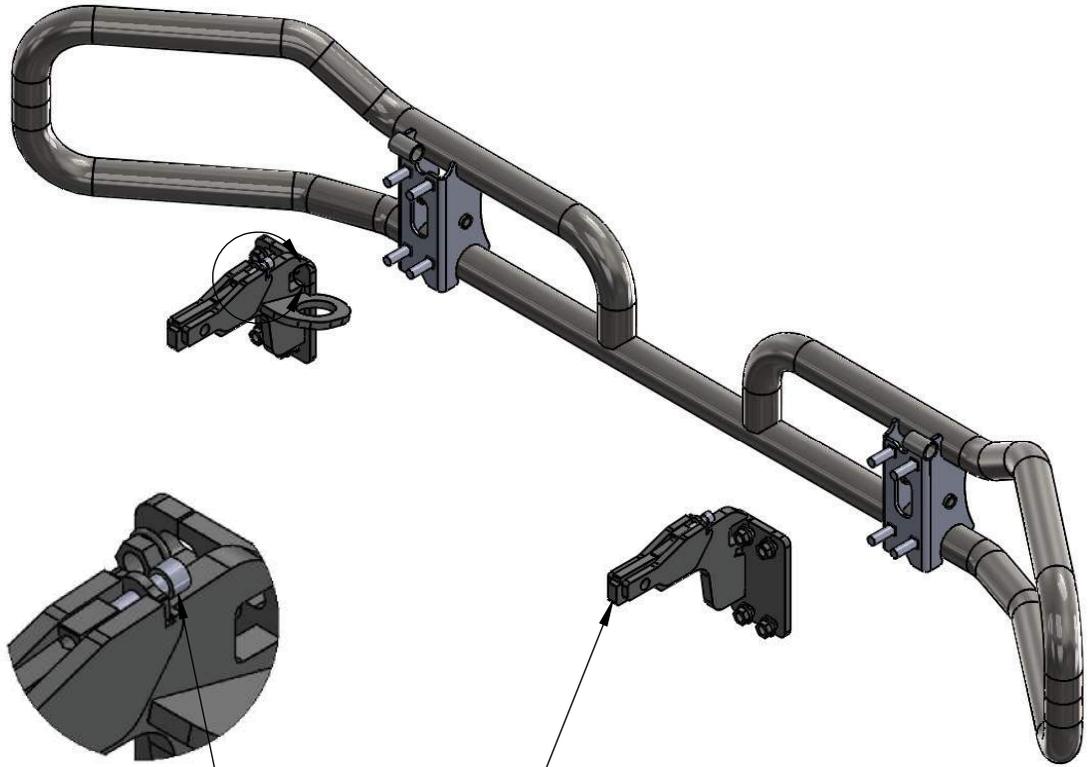

DETAIL C
SCALE 1 : 4

(1) INSERT THIS END INTO TOW HOOK RECEIVER, INSERT FACTORY RECEIVER PIN THROUGH HOLE TO SECURE.

(2) PULL BRACKET FORWARD, AND TIGHTEN THIS RETAINER BOLT TO COMPLETELY TIGHTEN BRACKET IN RECEIVER. TORQUE TO 75 FT LBS.

(3) INSTALL THE EX-GUARD BY INSERTING THE STUDS INTO THE BRACKET SLOTS, INSTALL THE FLANGE NUTS, TORQUE TO 150 FT LBS.

IMPORTANT!! Any Ex-Guard grille guard, bracket kit, or hardware must be used with corresponding Ex-Guard components. Use of any other product or brand with Ex-Guard products will immediately void the warranty provided by Ex-Guard Industries.