


MOUNTING INSTRUCTIONS - MB-19XG-GM46 MT

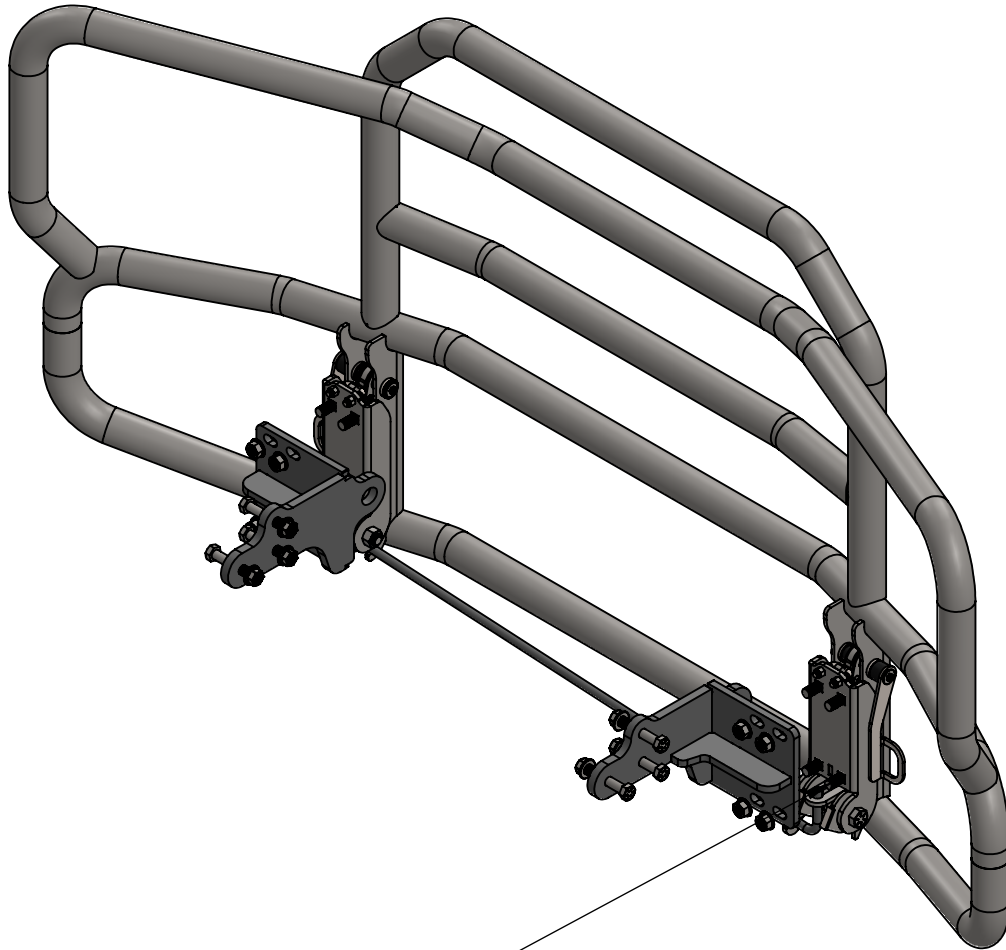

CALL: (888) 902-2777 FOR INSTALLATION QUESTIONS OR EMAIL: INFO@EX-GUARD.COM

1. LOCATE MOUNTING AREA ON FRAME AND REMOVE TOW HOOKS IF APPLICABLE. POSITION BRACKET THROUGH THE BUMPER OPENING SO THAT THE THREE HOLES LINE UP WITH THE THREE HOLES IN THE FRAME. INSERT BOLTS SUPPLIED AND TORQUE TO 200 FT/LBS.



2. INSTALL THE EX-GUARD BY INSERTING 5/8" STUDS INTO BRACKET SLOTS AND INSTALL FLANGE NUTS. TORQUE TO 150FT/LBS.



IMPORTANT!! Any Ex-Guard grille guard, bracket kit, or hardware must be used with corresponding Ex-Guard components. Use of any other product or brand with Ex-Guard products will immediately void the warranty provided by Ex-Guard Industries.

© THIS DRAWING IS THE PROPERTY OF EX-GUARD INDUSTRIES, INC. COPYRIGHT IS RESERVED BY THEM AND THE DRAWING ISSUED ON CONDITION THAT IT MUST NOT BE USED FOR ANY OTHER PURPOSE OTHER THAN FOR WHICH IT WAS SUPPLIED AND NOT TO BE COPIED, REPRODUCED, RETAINED OR DISCLOSED TO ANY UNAUTHORIZED PERSON EITHER WHOLLY OR IN PART WITHOUT THE CONSENT IN WRITING OF EX-GUARD INDUSTRIES INC.




CALL: (888) 902-2777 FOR INSTALLATION QUESTIONS OR EMAIL: INFO@EX-GUARD.COM

PARTS LIST - MB-19XG-GM46

BOLT KIT - XG-BRK23 & MB-BRK4

COMPATIBLE GUARDS

- Check <https://ex-guard.com/>

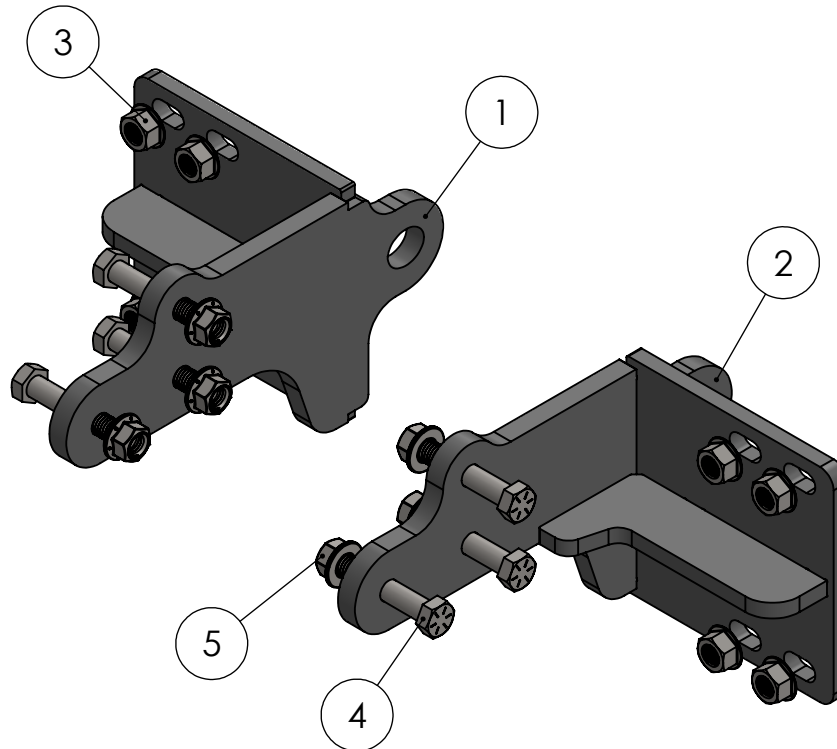

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	MB-19XG-GM46-BR10DR	DRIVER SIDE MOUNTING BRACKET	1
2	MB-19XG-GM46-BR10PS	PASSENGER SIDE MOUNTING BRACKET	1
3	XG-001-62-11FHHNL5Z	5/8-11 FLANGE PATCH HEX NUT	8
4	XG-001-62-11HHC3508ZY	5/8-11 X 3 1/2\"	6
5	XG-001-62-11FHHNTL8ZY	5/8-11 TOP LOCK FLANGE HEX NUT GRADE 8 YELLOW ZINC PLATED STEEL	6

ATTENTION!! Any Ex-Guard grille guard, bracket kit, or hardware must be used with corresponding Ex-Guard components. Use of any other product or brand with Ex-Guard products will immediately void the warranty provided by Ex-Guard Industries.