


MOUNTING INSTRUCTIONS - XG-16F650 MT

CALL FOR (888) 802-2777 FOR INSTALLATION QUESTIONS OR EMAIL INFO@EX-GUARD.COM

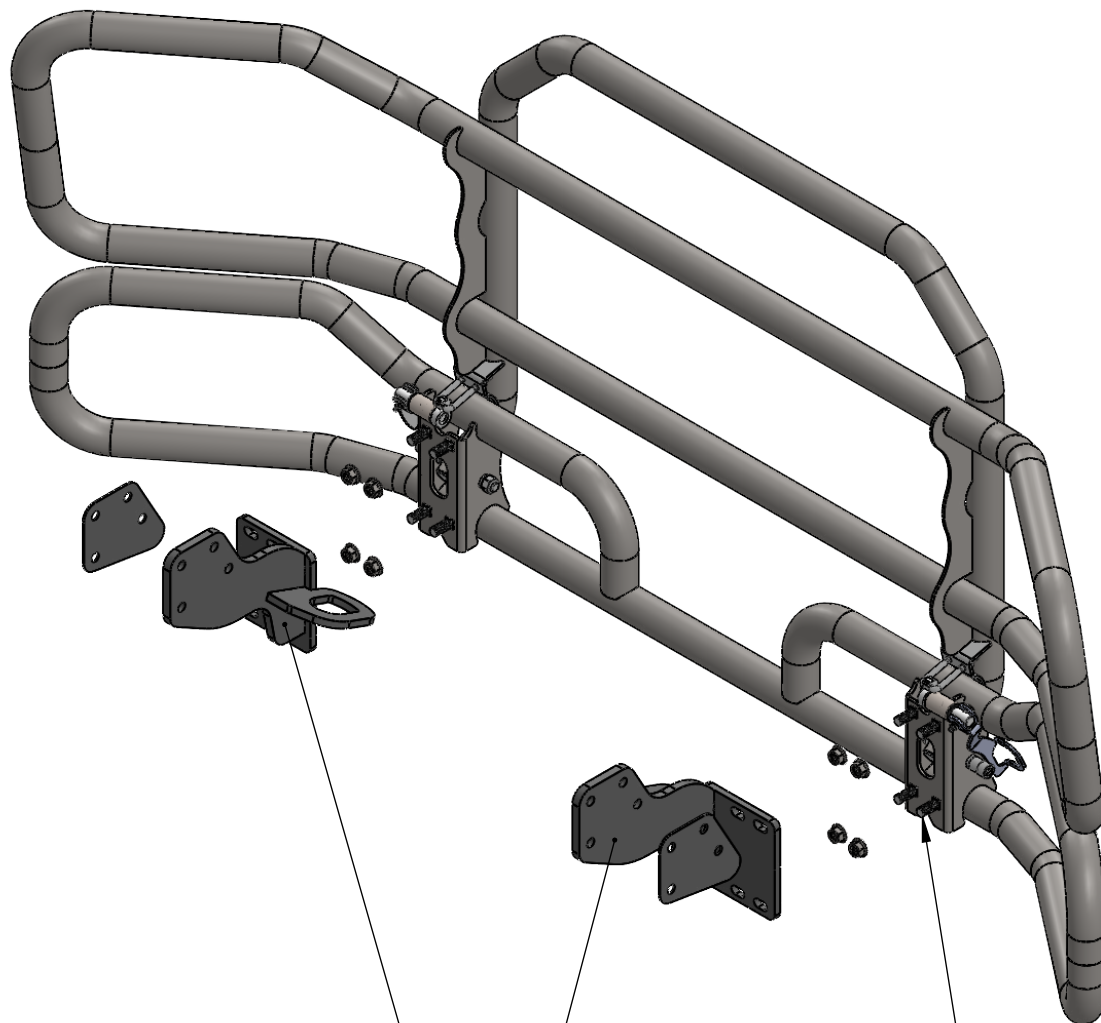

1. REMOVE TOW HOOK
AND DISCARD

2. INSTALL BRACKETS AS SHOWN
WITH EXISTING BOLTS AND
TORQUE TO 150 FT/LBS

3. INSTALL EX-GUARD BY:
INSERTING STUDS INTO
MOUNTING BRACKETS AND
TORQUE TO 150 FT/LBS

IMPORTANT!! Any Ex-Guard grille guard, bracket kit, or hardware must be used with corresponding Ex-Guard components. Use of any other product or brand with Ex-Guard products will immediately void the warranty provided by Ex-Guard Industries.

© THIS DRAWING IS THE PROPERTY OF EX-GUARD INDUSTRIES, INC. COPYRIGHT IS RESERVED BY THEM AND THE DRAWING ISSUED ON CONDITION THAT IT MUST NOT BE USED FOR ANY OTHER PURPOSE OTHER THAN FOR WHICH IT WAS SUPPLIED AND NOT TO BE COPIED, REPRODUCED, RETAINED OR DISCLOSED TO ANY UNAUTHORIZED PERSON EITHER WHOLLY OR IN PART WITHOUT THE CONSENT IN WRITING OF EX-GUARD INDUSTRIES INC.




PARTS LIST - XG-16F650

BOLT KIT - XG-BRK23

COMPATIBLE GUARDS

- Check <https://ex-guard.com/>

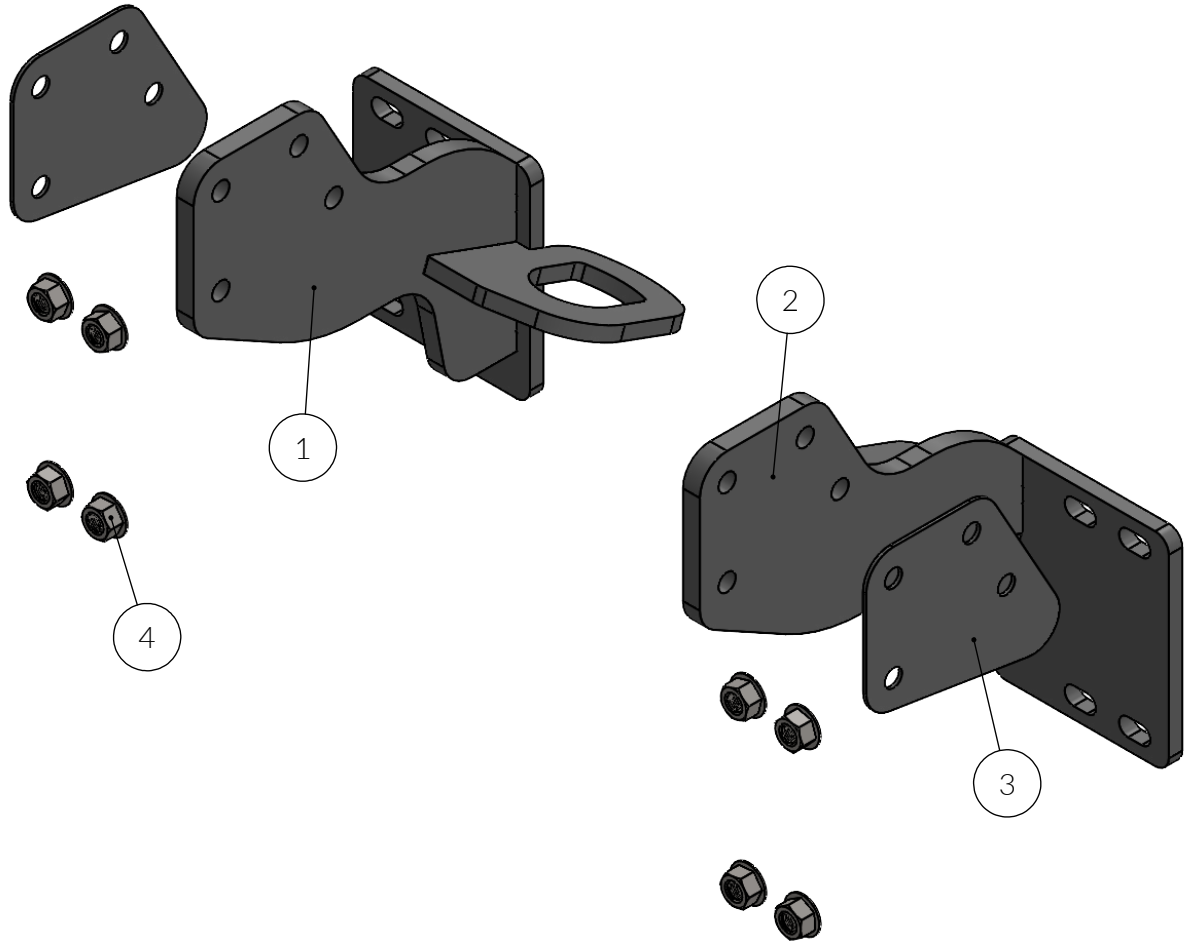

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	XG-16F650-BR10L	BRACKET MOUNT (LH)	1
2	XG-16F650-BR10R	BRACKET MOUNT (RH)	1
3	XG-16F650-BR04	PLATE	2
4	XG-001-62CNWF0Z_HARD	5/8-11 FLANGE AUTO LOCKNUT	8

ATTENTION!! Any Ex-Guard grille guard, bracket kit, or hardware must be used with corresponding Ex-Guard components. Use of any other product or brand with Ex-Guard products will immediately void the warranty provided by Ex-Guard Industries.