


PARTS LIST - MB-19HX-GM15 BOLT KIT - MB-BRK5 COMPATIBLE GUARDS

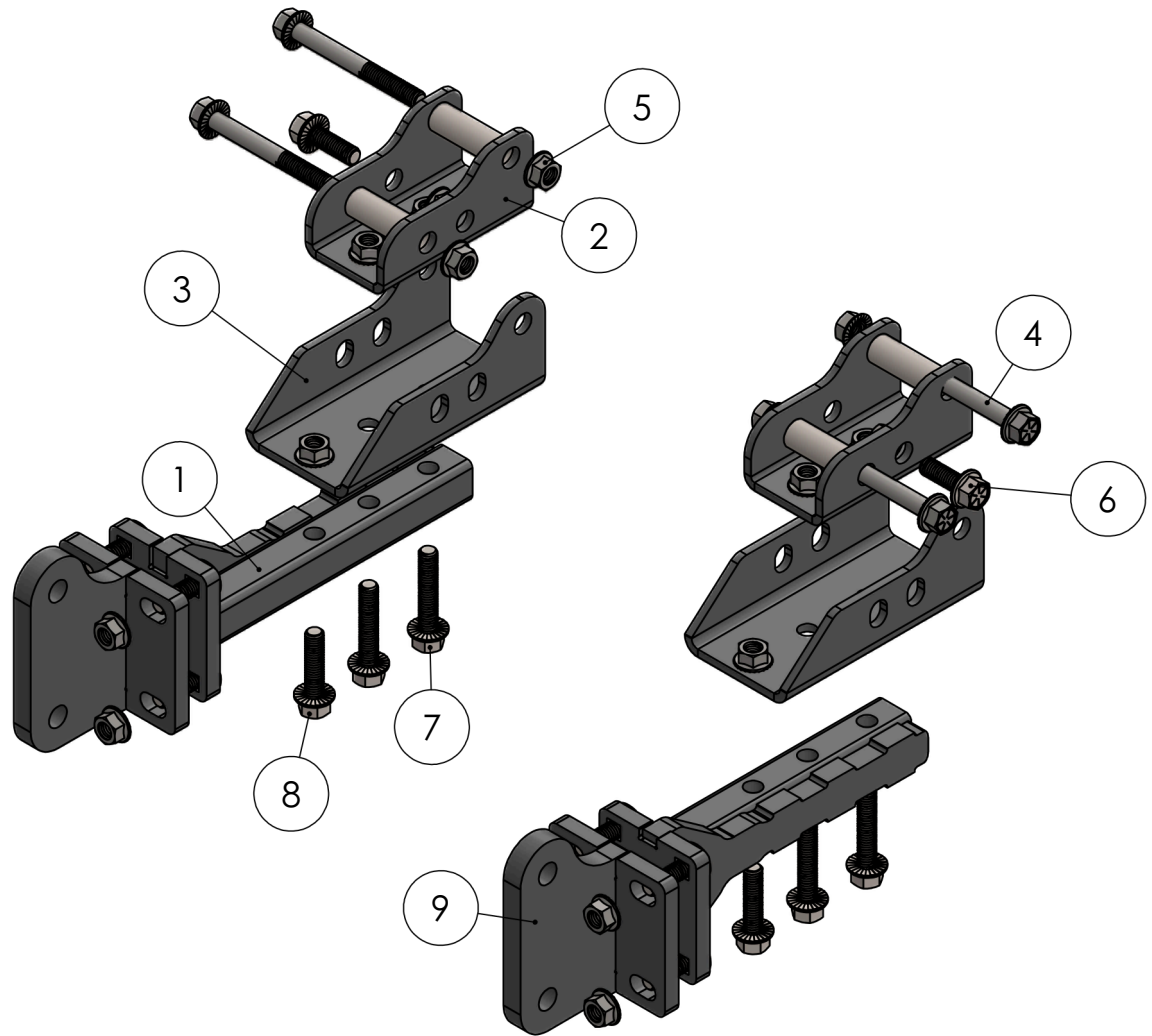

CALL: (888) 902-2777 FOR INSTALLATION QUESTIONS OR EMAIL: INFO@EX-GUARD.COM

- Check <https://ex-guard.com/>



ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	MB-19HX-GM15-BR02SA	RECIEVER BRACKET	2
2	MB-19HX-GM15-BR04SA	FRAME SUPPORT INNER PLATE ASSEMBLY	2
3	MB-19HX-GM15-BR01SA	FRAME SUPPORT PLATE ASSEMBLY	2
4	XG-001-50-13SFHHC4508Z	1/2"-13 X 4 1/2" SERRATED FLANGE HEX HEAD CAPSCREW	4
5	XG-001-50-13SFHHC8ZY	1/2"-13 SERRATED FLANGE HEX NUT	14
6	XG-001-50-13SFHHC1508ZY	1/2"-13 X 1 1/2" SERRATED FLANGE HEX HEAD CAPSCREW	2
7	XG-001-50-13SFHHC2508ZY	1/2"-13 X 2 1/2" SERRATED FLANGE HEX HEAD CAPSCREW	4
8	XG-001-50-13SFHHC2008ZY	1/2"-13 X 2" SERRATED FLANGE HEX HEAD CAPSCREW	2
9	MB-19HX-GM15-BR06SA	GUARD MOUNT ASSEMBLY	2

ATTENTION!! Any Ex-Guard grille guard, bracket kit, or hardware must be used with corresponding Ex-Guard components. Use of any other product or brand with Ex-Guard products will immediately void the warranty provided by Ex-Guard Industries.

MB-19HX-GM15 Installation Instructions


1





TOOLS NEEDED:

- 18mm Wrench & Socket**
- 15/16 Wrench & Socket**
- 3/4 Wrench & Socket**
- Torque Wrench**

2

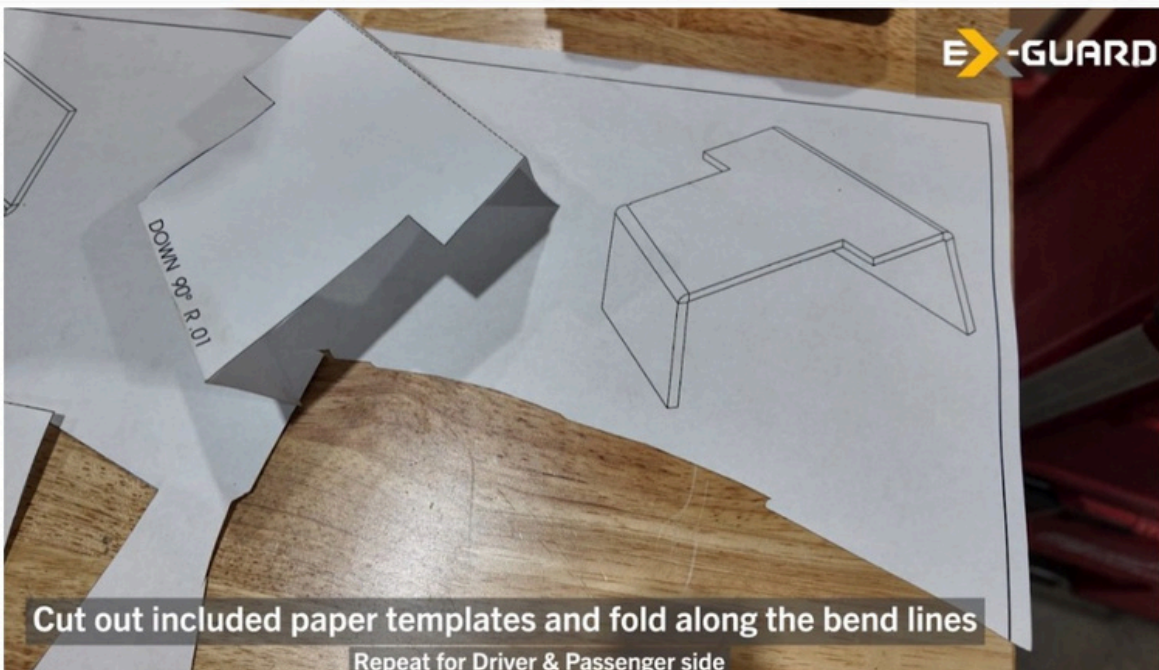

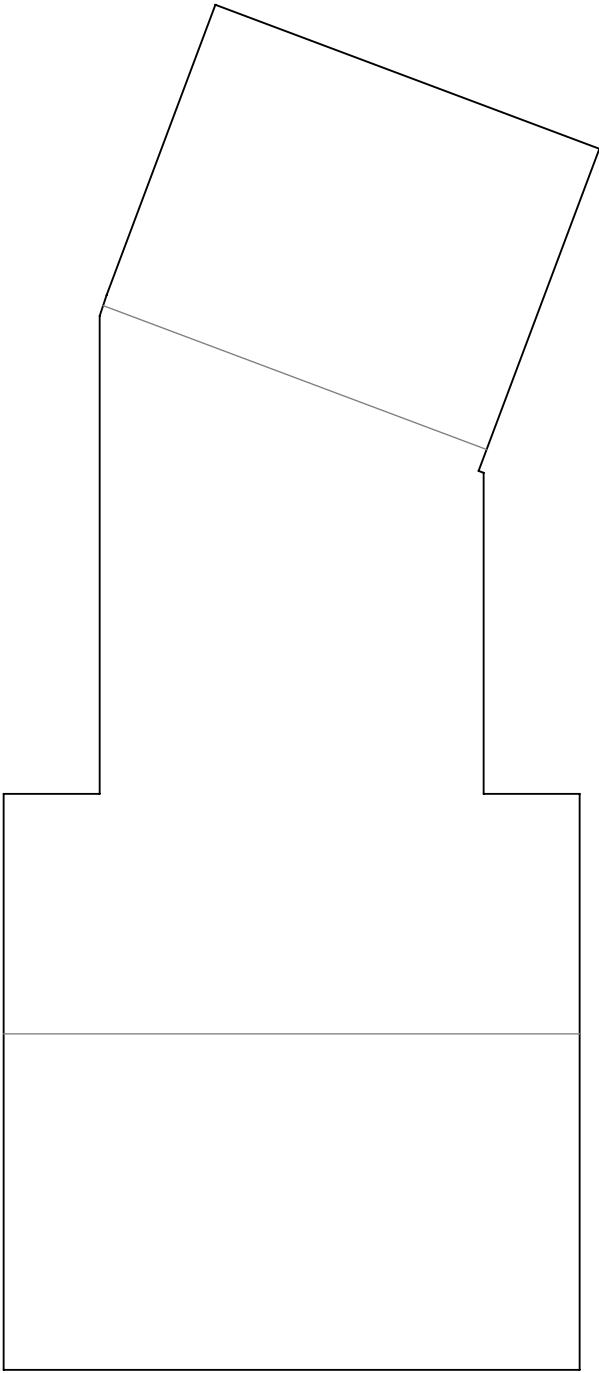

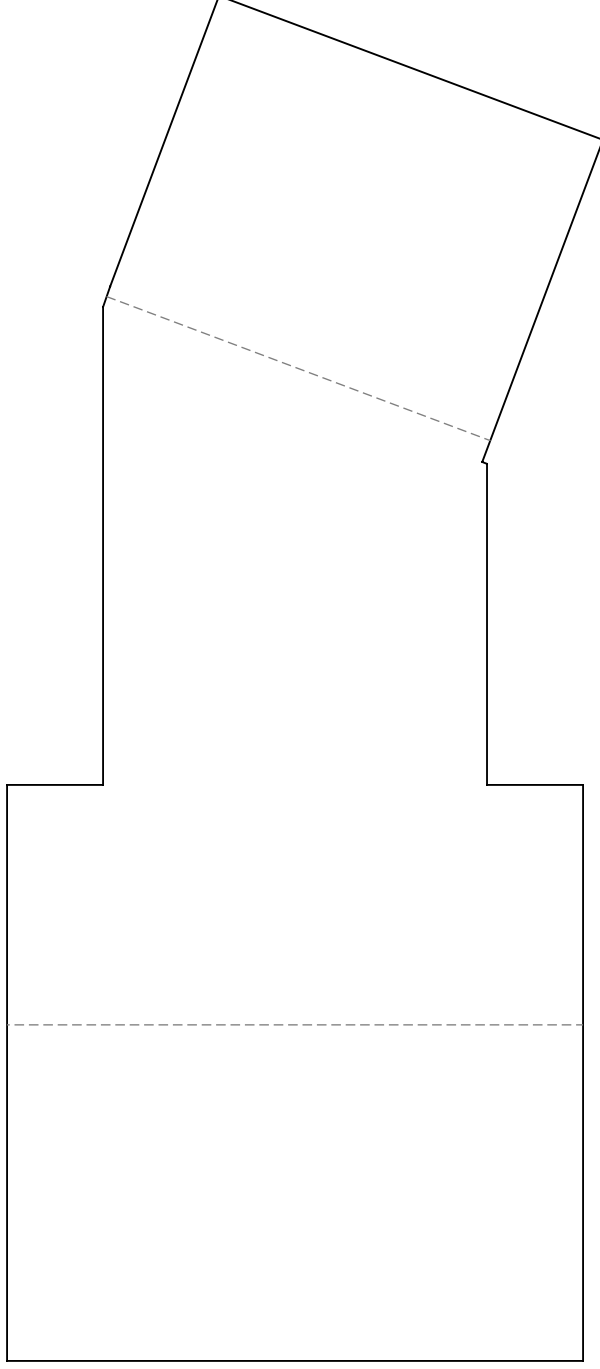


3



Slip the template behind the tow hook and trace along the edge

Repeat for Driver & Passenger side


4

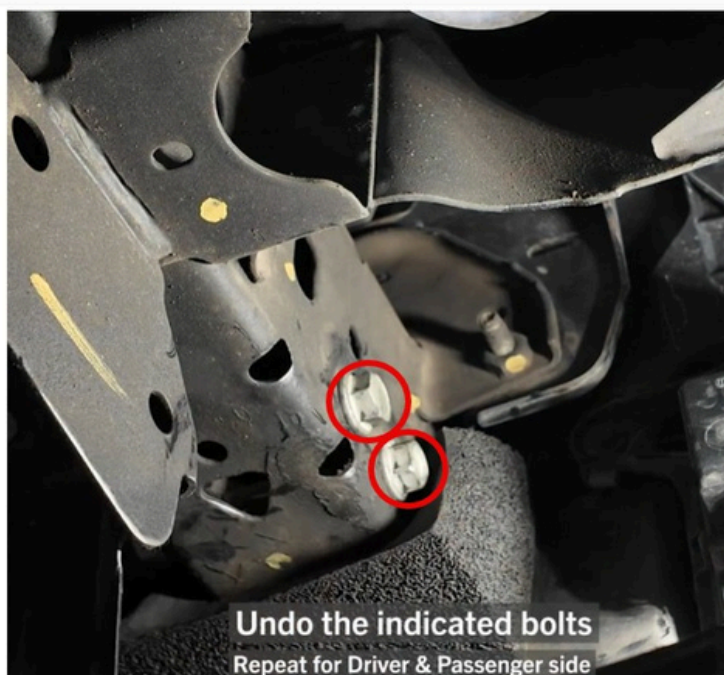

Undo the indicated bolts

Repeat for Driver & Passenger side

5

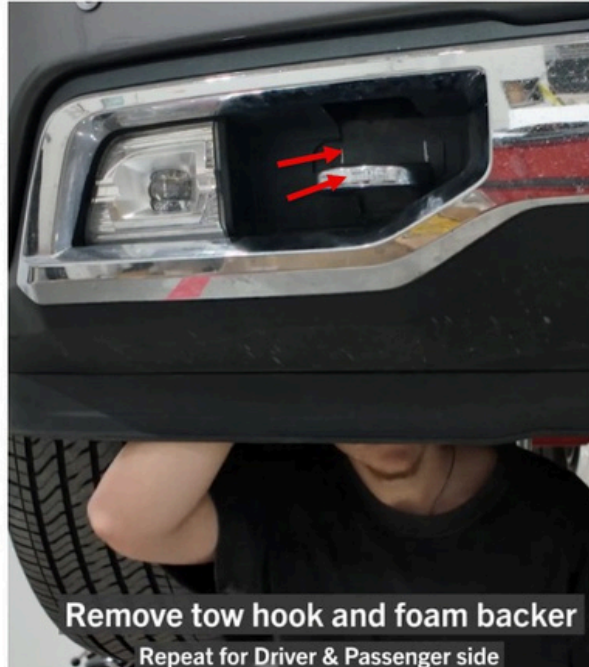

Remove tow hook and foam backer
Repeat for Driver & Passenger side

6



Cut along the traced line
Repeat for Driver & Passenger side

7



8




9



Align and insert the bottom 2 bolts

Repeat for Driver & Passenger side


10

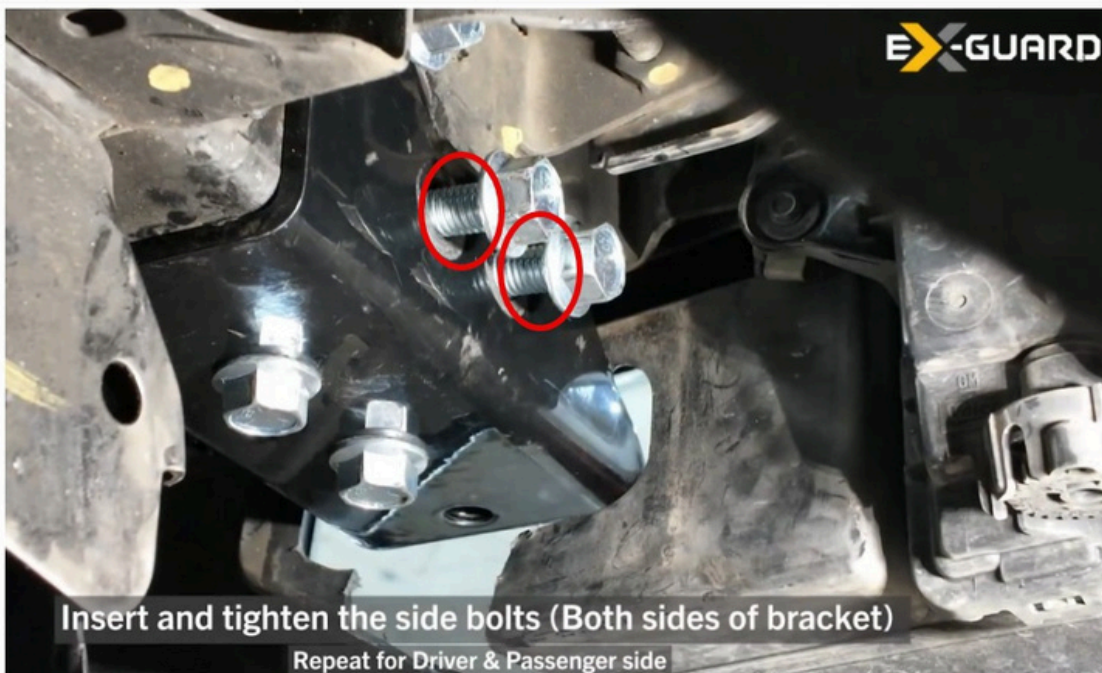

Insert and tighten the side bolts (Both sides of bracket)

Repeat for Driver & Passenger side


11

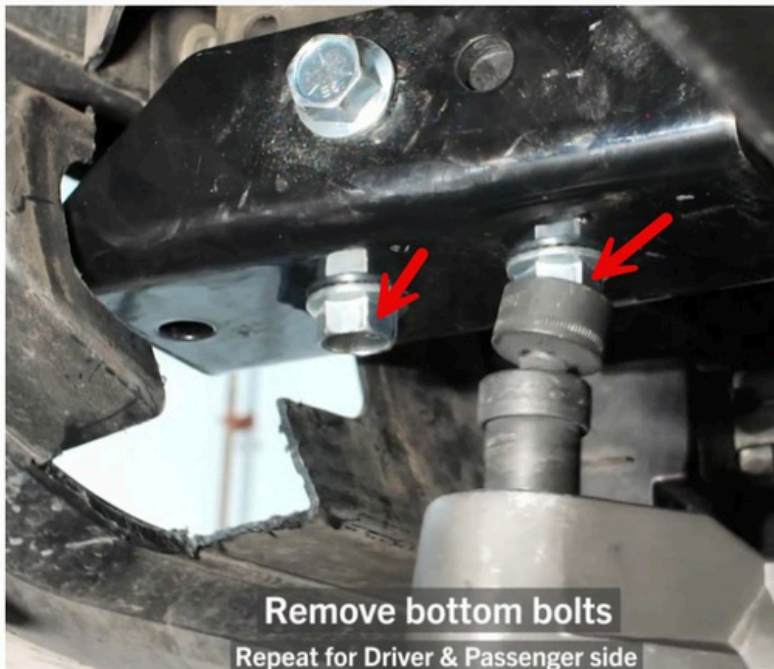

12




13

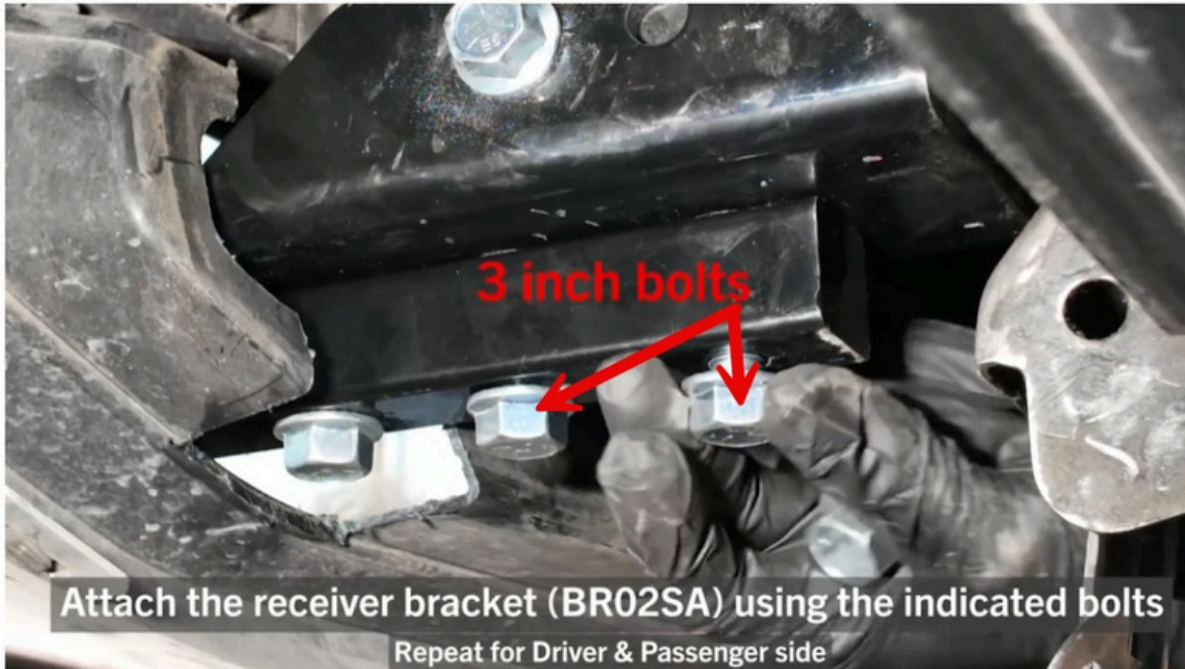

Attach the receiver bracket (BR02SA) using the indicated bolts

Repeat for Driver & Passenger side


14

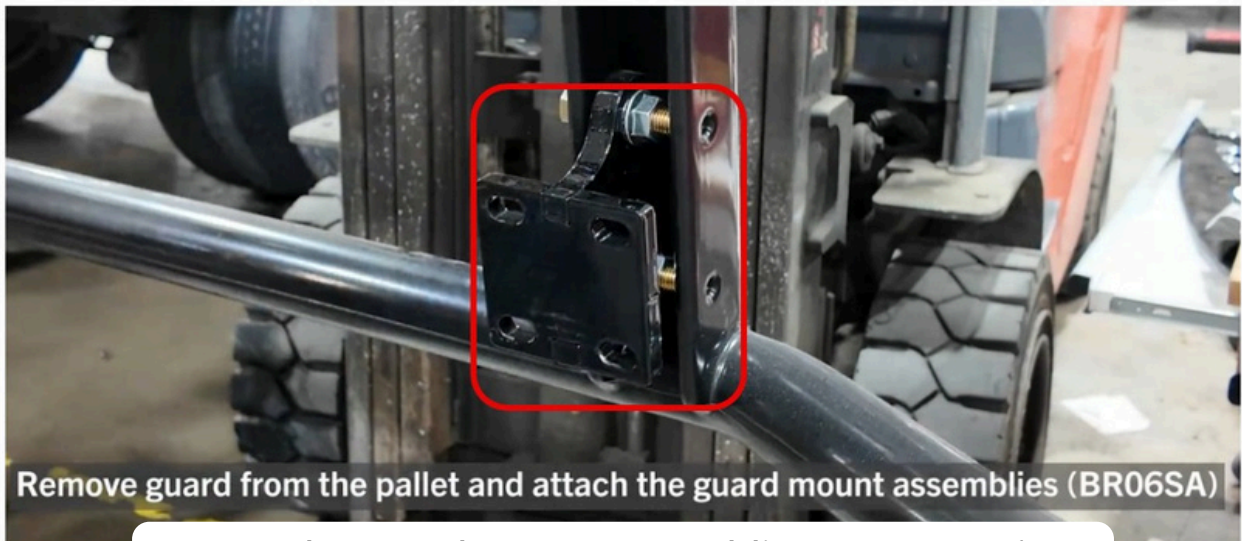

Remove guard from the pallet and attach the guard mount assemblies (BR06SA)

Torque the guard mount assemblies to 225 FT/LBS

15

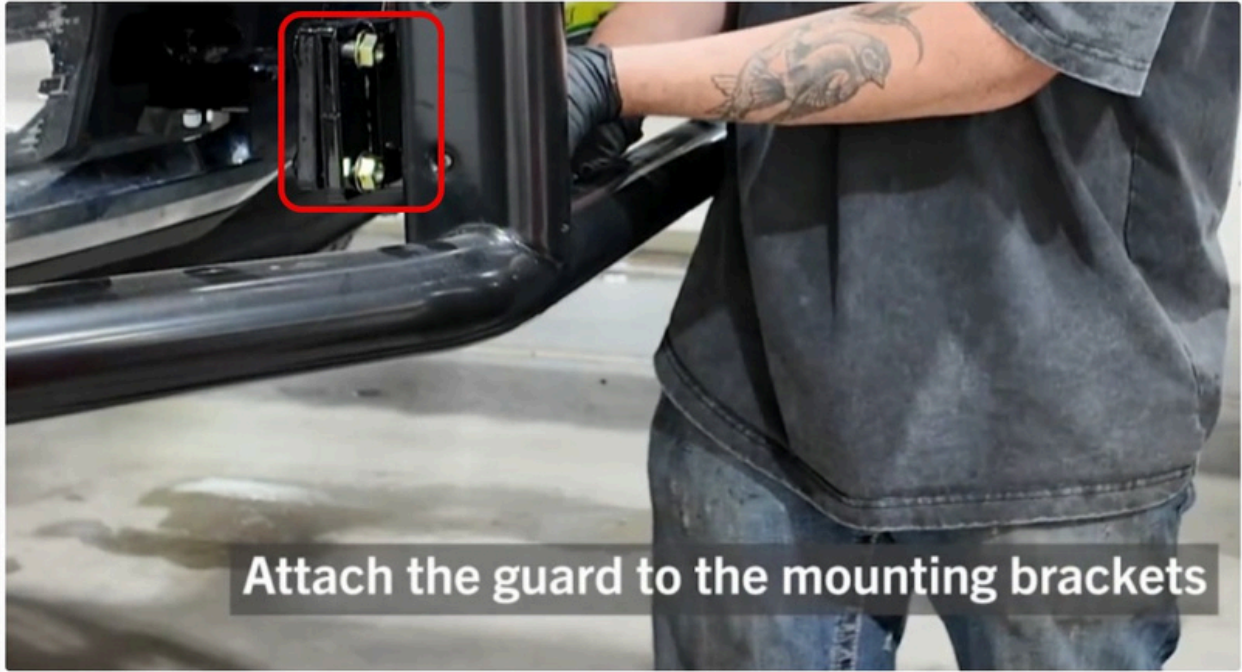


16



17



18

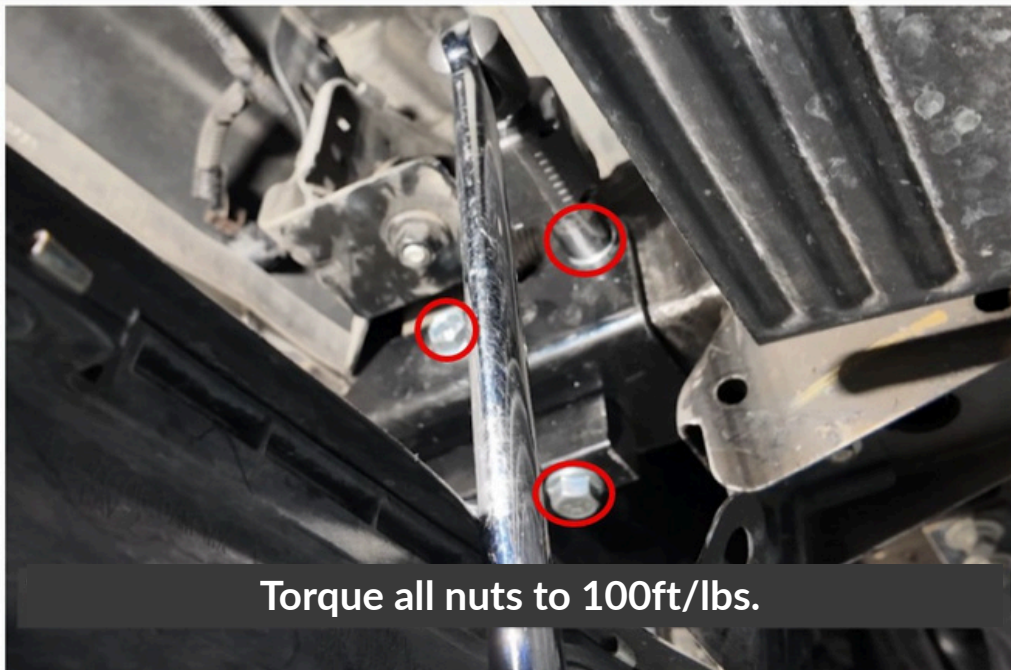

DRIVE SAFE!

