


MOUNTING INSTRUCTIONS - MB-21HX-FD15 MT



CALL: (888) 902-2777 FOR INSTALLATION QUESTIONS OR EMAIL: INFO@EX-GUARD.COM

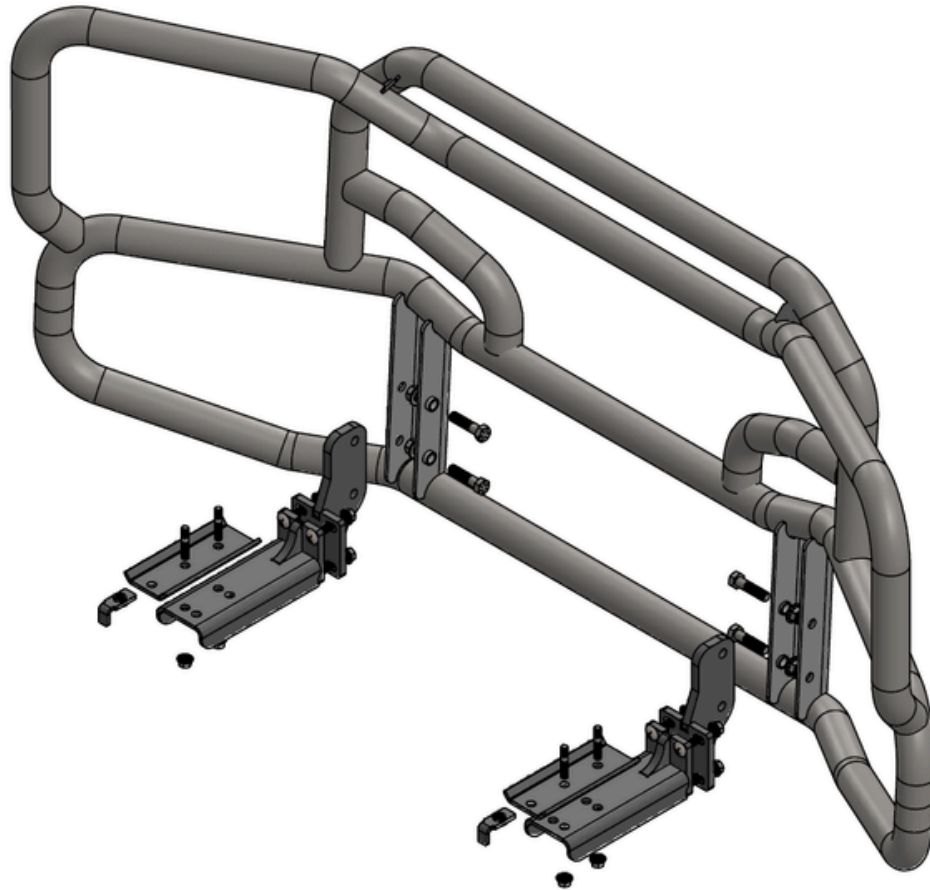

IMPORTANT!! Any Ex-Guard grille guard, bracket kit, or hardware must be used with corresponding Ex-Guard components. Use of any other product or brand with Ex-Guard products will immediately void the warranty provided by Ex-Guard Industries.


© THIS DRAWING IS THE PROPERTY OF EX-GUARD INDUSTRIES, INC. COPYRIGHT IS RESERVED BY THEM AND THE DRAWING ISSUED ON CONDITION THAT IT MUST NOT BE USED FOR ANY OTHER PURPOSE OTHER THAN FOR WHICH IT WAS SUPPLIED AND NOT TO BE COPIED, REPRODUCED, RETAINED OR DISCLOSED TO ANY UNAUTHORIZED PERSON EITHER WHOLLY OR IN PART WITHOUT THE CONSENT IN WRITING OF EX-GUARD INDUSTRIES INC.

PARTS LIST - MB-21HX-FD15

BOLT KIT - MB-BRK3

COMPATIBLE GUARDS

- Check <https://ex-guard.com/>

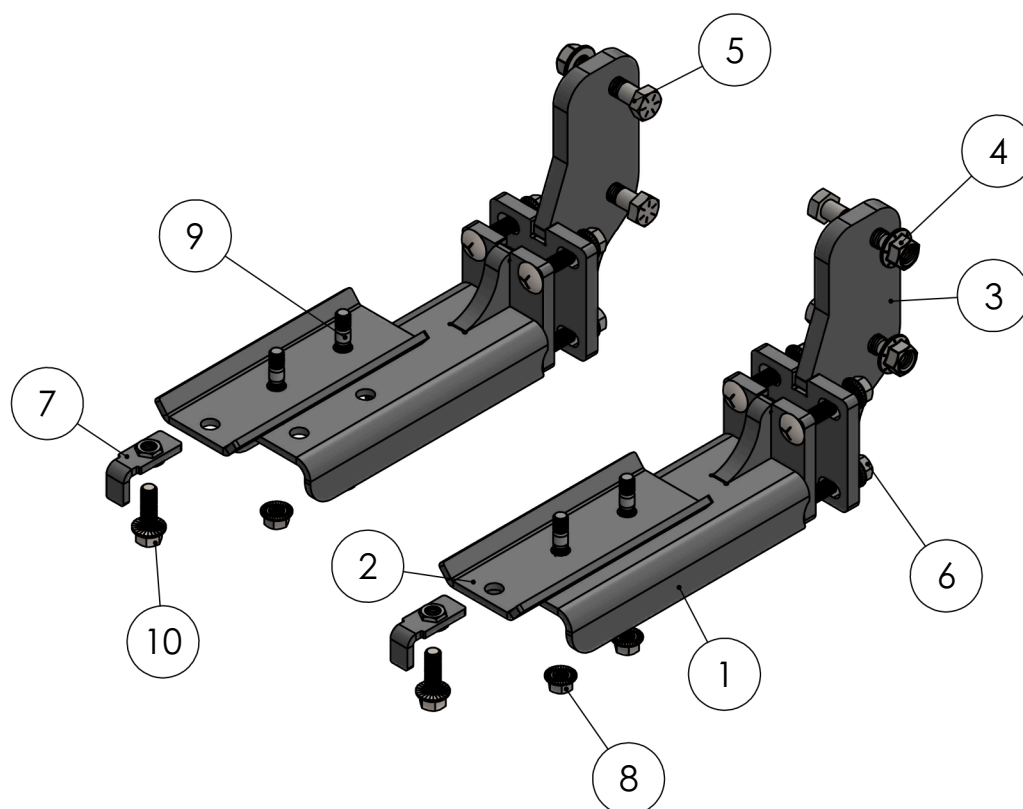

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	MB-21HX-FD15-BR10	RECIEVER BRACKET ASSEMBLY	2
2	MB-21HX-FD15-BR01	FRAME SUPPORT PLATE	2
3	MB-21HX-FD15-BR07SA	GUARD MOUNT ASSEMBLY	2
4	XG-001-62-11FHHNTL8ZY	5/8"-11 TOP LOCK FLANGE HEX NUT GRADE 8 YELLOW ZINC PLATED STEEL	4
5	XG-001-62-11HHC2508ZY	5/8-11 X 2 1/2" HEX HEAD CAPSCREW	4
6	XG-001-50-13SFHHN8ZY	1/2"-13 SERRATED FLANGE HEX NUT	8
7	MB-21HX-FD15-NKSA	NUT KEEPER ASSEMBLY	2
8	XG-001-M12-1.75SFHHN10.9ZY	M12 SERRATED FLANGE HEX NUT	4
9	XG-001-M12-1.75TBES608.8Z	M12-1.75 X 60MM THREADED BOTH ENDS STUD	4
10	XG-001-50-13SFHHC1508ZY	1/2"-13 X 1 1/2" SERRATED FLANGE HEX HEAD CAPSCREW	2

ATTENTION!! Any Ex-Guard grille guard, bracket kit, or hardware must be used with corresponding Ex-Guard components. Use of any other product or brand with Ex-Guard products will immediately void the warranty provided by Ex-Guard Industries.



CALL: (888) 902-2777 FOR INSTALLATION QUESTIONS OR EMAIL: INFO@EX-GUARD.COM



MB-21HX-FD15 Installation Instructions

1



TOOLS NEEDED:

- 7mm Socket**
- 18mm Wrench & Socket**
with Swivel & Extension
- 15/16 Wrench & Socket**
- 3/4 Wrench & Socket**
- Torque Wrench**

2



Remove air dam by undoing the 3 screws


Repeat for Driver & Passenger side

3



Remove rear tow hook bolt
Repeat for Driver & Passenger side

4

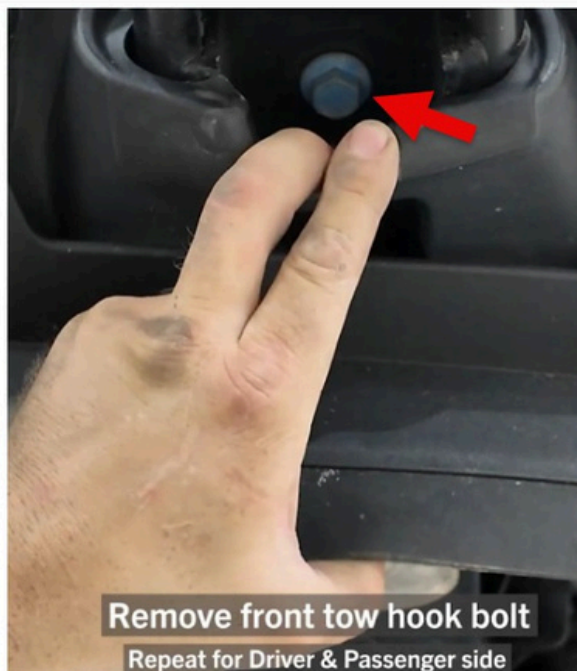

Remove front tow hook bolt
Repeat for Driver & Passenger side


5



6



6

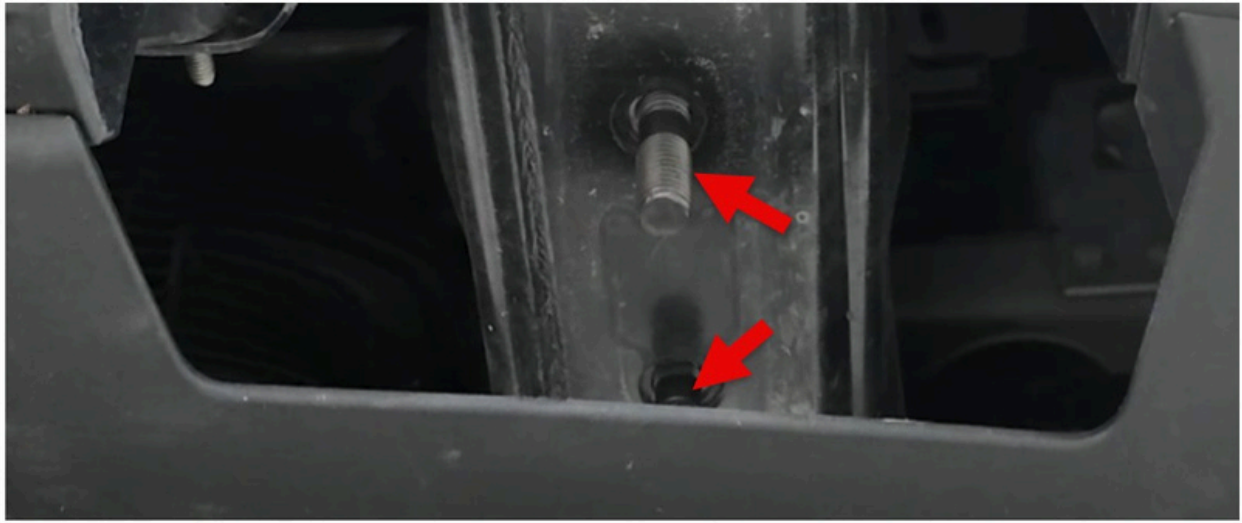

7




7



Insert frame support plate

Repeat for Driver & Passenger side

8

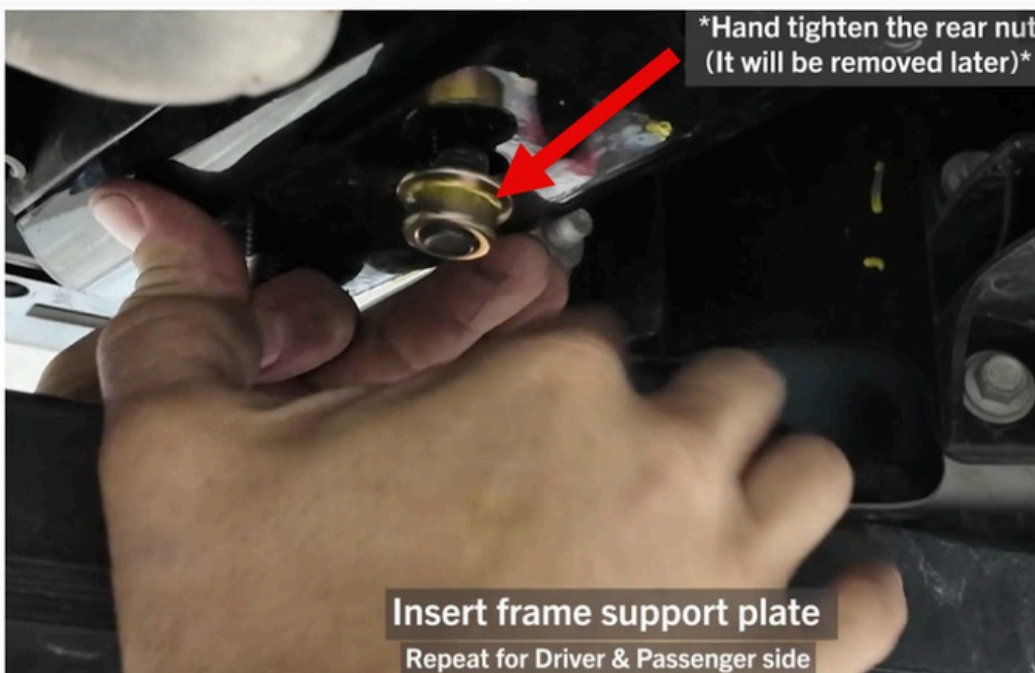

***Hand tighten the rear nut
(It will be removed later)***

Insert frame support plate

Repeat for Driver & Passenger side

9



Thread on and torque the rear bolts to 100ft/lbs.

Repeat for Driver & Passenger side

10




Remove the rear nut

Repeat for Driver & Passenger side


11



11

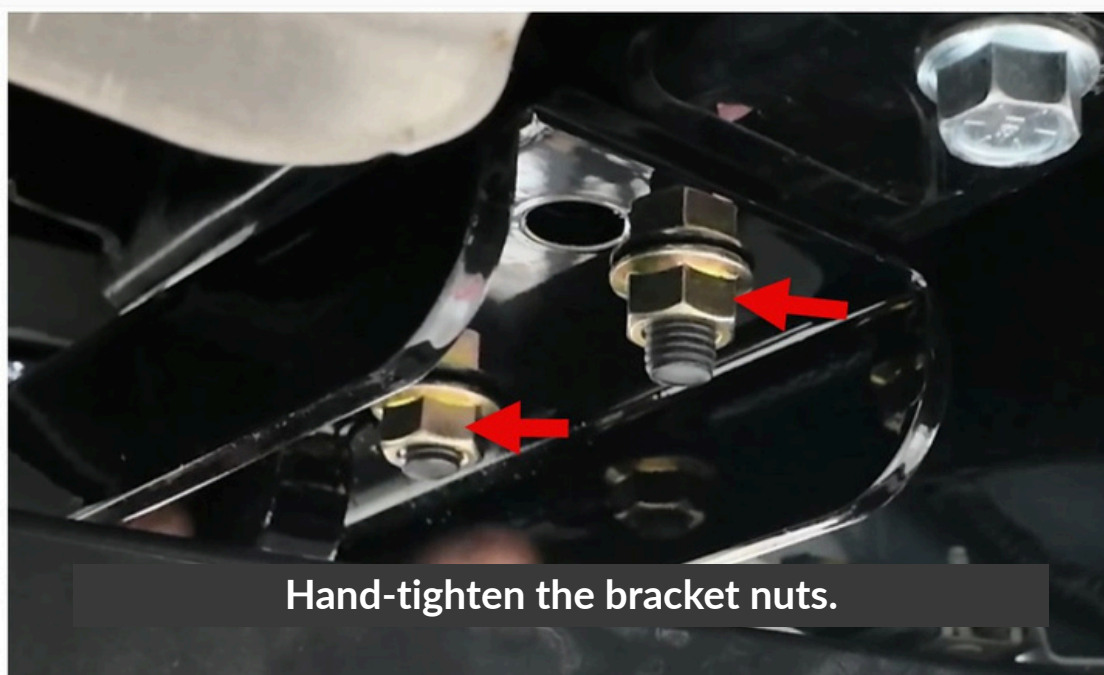

12

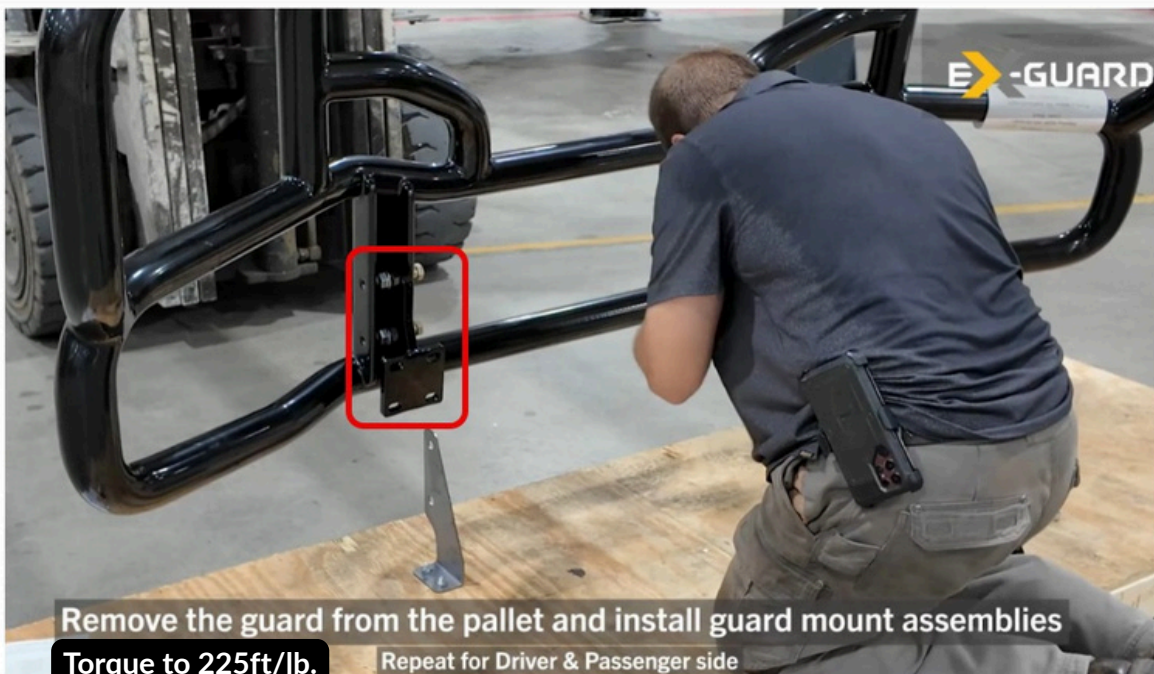


Remove the guard from the pallet and install guard mount assemblies

Torque to 225ft/lb.

Repeat for Driver & Passenger side


13

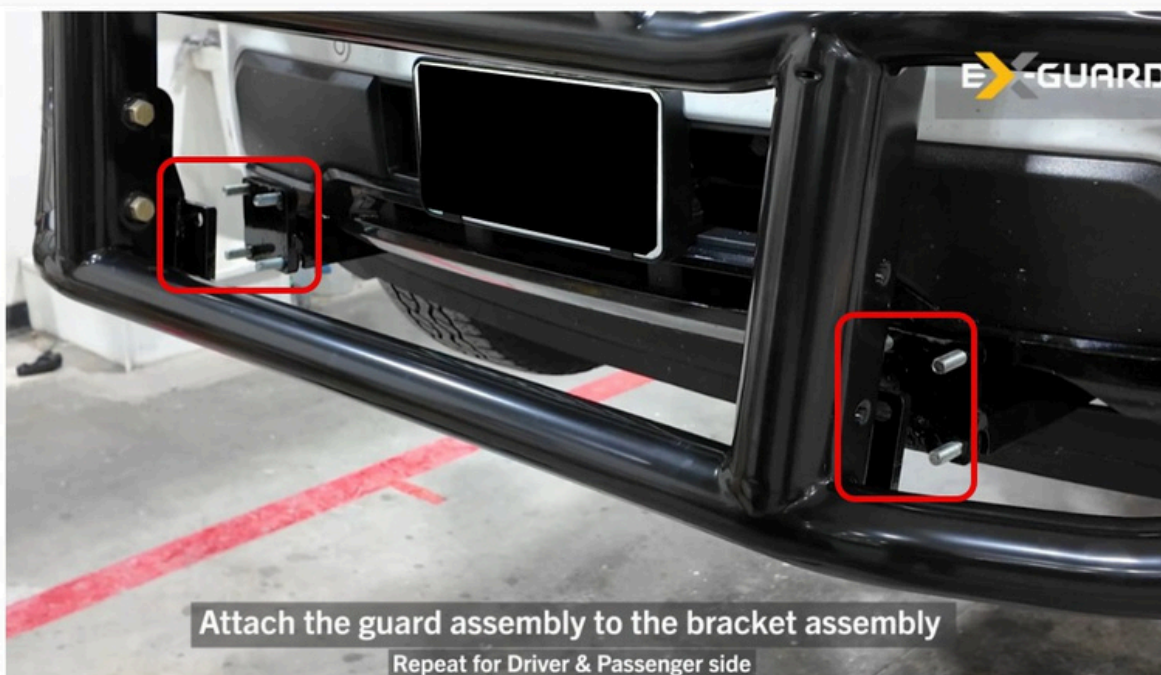

Attach the guard assembly to the bracket assembly

Repeat for Driver & Passenger side


14

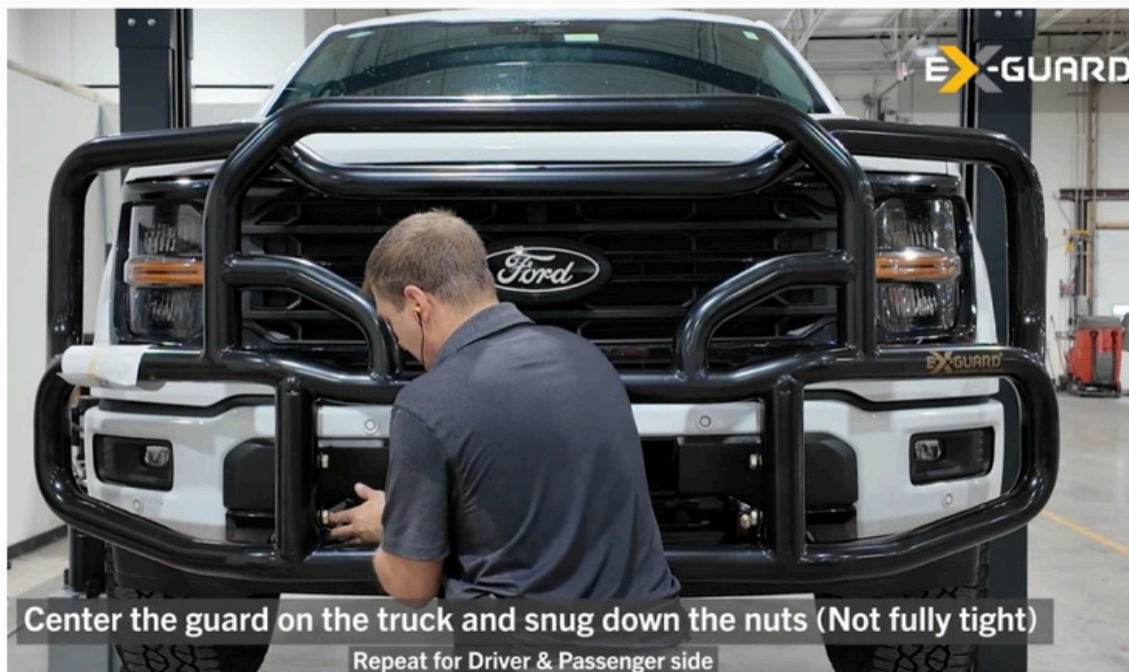

15



16

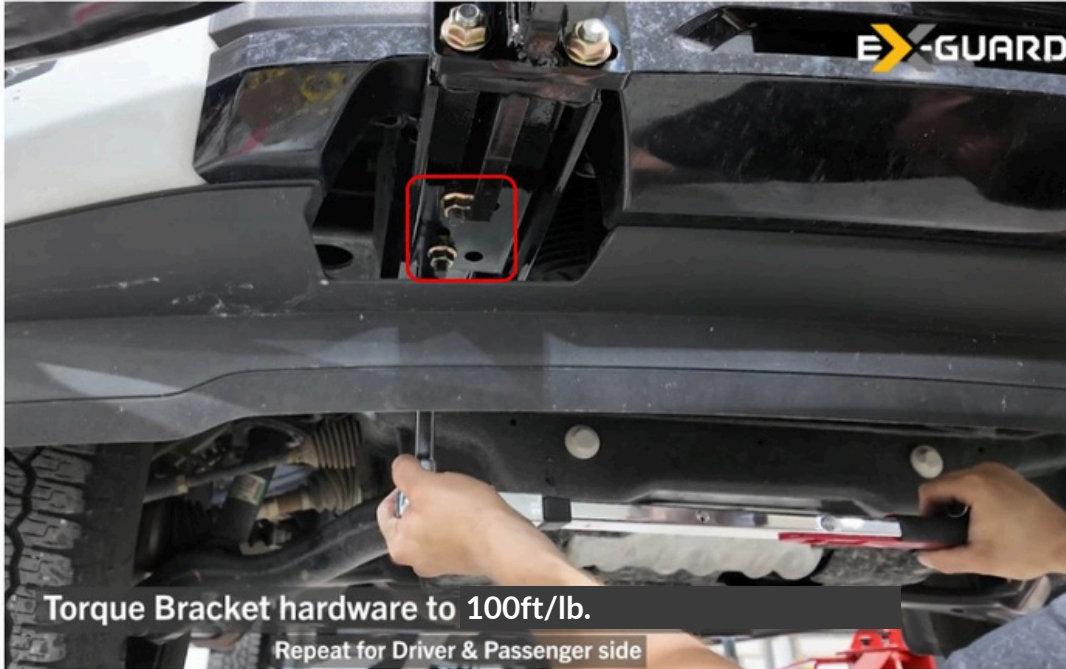

17



18



19

