

PARTS LIST - XG-26VNL


BOLT KIT - XG-BRK38

COMPATIBLE GUARDS



CALL: (888) 902-2777 FOR INSTALLATION QUESTIONS OR EMAIL: INFO@EX-GUARD.COM

- Check <https://ex-guard.com/>

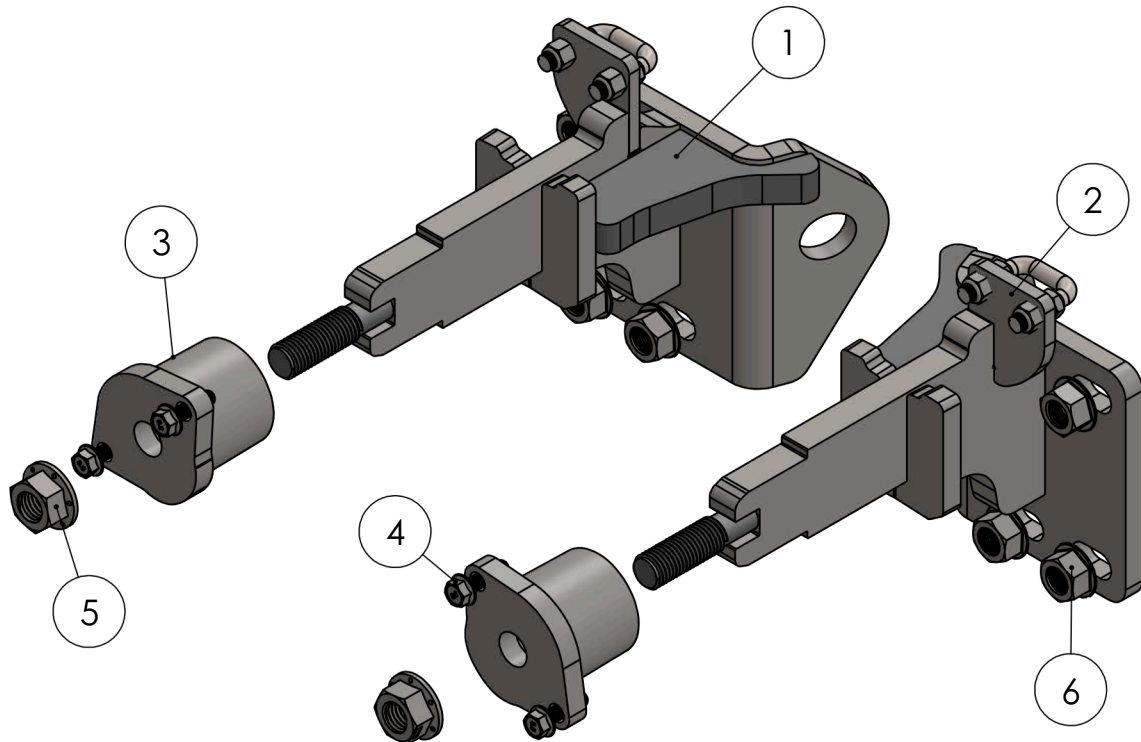

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	XG-26VNL-BR10DR	26VNL DRIVER SIDE MOUNTING BRACKET	1
2	XG-26VNL-BR10PS	26VNL PASSENGER SIDE MOUNTING BRACKET	1
3	XG-26VNL-BR07SA	26VNL DRIVER SIDE RECIEVER SUPPORT ASSEMBLY	2
4	XG-001-M8-1.25FHHC308.8Z	M8X30MM FLANGE HEX HEAD CAPSCREW	4
5	XG-001-75-10FHHNAL8ZY	3/4\"-10 FLANGE HEX AUTO LOCKNUT	2
6	XG-001-62-11FHHNL5Z	5/8-11 FLANGE PATCH HEX NUT	6

ATTENTION!! Any Ex-Guard grille guard, bracket kit, or hardware must be used with corresponding Ex-Guard components. Use of any other product or brand with Ex-Guard products will immediately void the warranty provided by Ex-Guard Industries.


STEP 1:
Locate receiver covers
and remove on both sides.



STEP 2:
Open the hood of the truck.



STEP 3:
Locate these two bolts
and remove them.

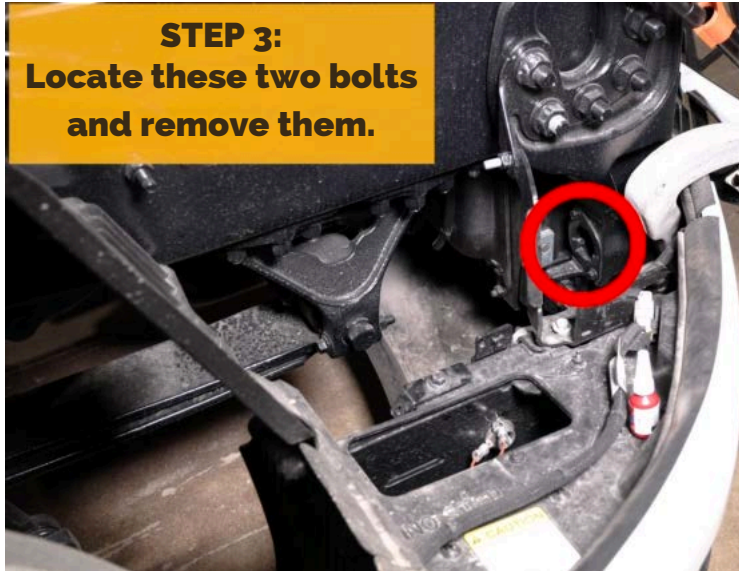

STEP 4:
Remove the 3 pieces
inside the assembly.



STEP 4:
Remove the 3 pieces
inside the assembly.



STEP 4:
Remove the 3 pieces
inside the assembly.




repeat on other side




Open the hood. Make sure brackets are all the way inserted otherwise the hood will not clear.

If the bracket is prevented from sitting flush with the towhook receiver (refer to Fig. 1), you may need to grind down the edges of the bracket (refer to Fig. 2).

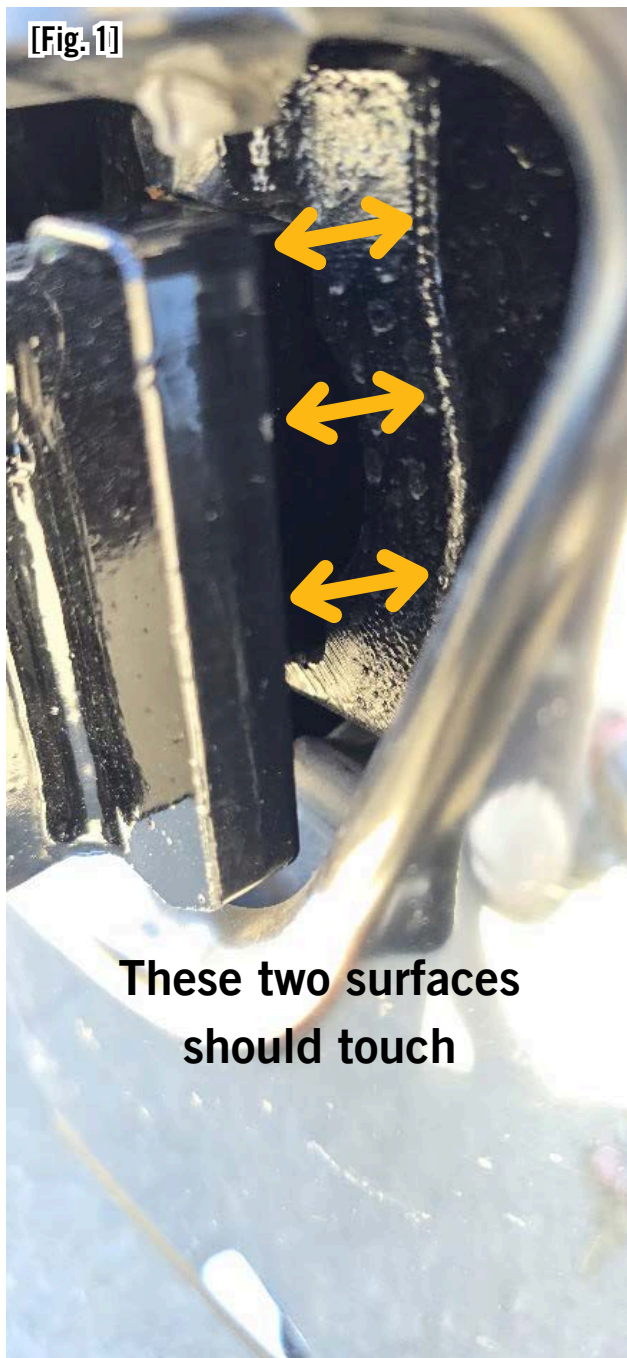

On the backside of the receiver, where the spring was previously removed, insert receiver support assembly.

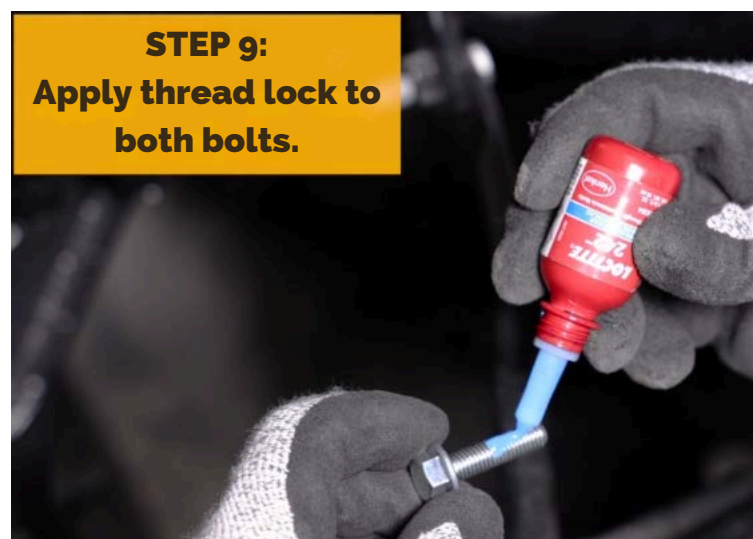



STEP 12:
Install flange nuts
leaving 1/8" thread exposed.



STEP 13:
Close the hood.



STEP 14:
Install Ex-Guard.
Torque nuts to 150 ft-lb.






If the hood comes in contact with the brackets, carefully support the hood above the brackets; The hood needs to be adjusted.



If both or one of the brackets attaching the hood to the frame is sitting too far back (refer to Fig. 1, bolts at the front of their slots), loosen the bolts and move the hood forward, away from the cab, until both brackets are correctly positioned (refer to Fig. 2, all bolts at the back of their slots), and the hood clears the brackets. Then, re-torque the loose bolts to factory settings.

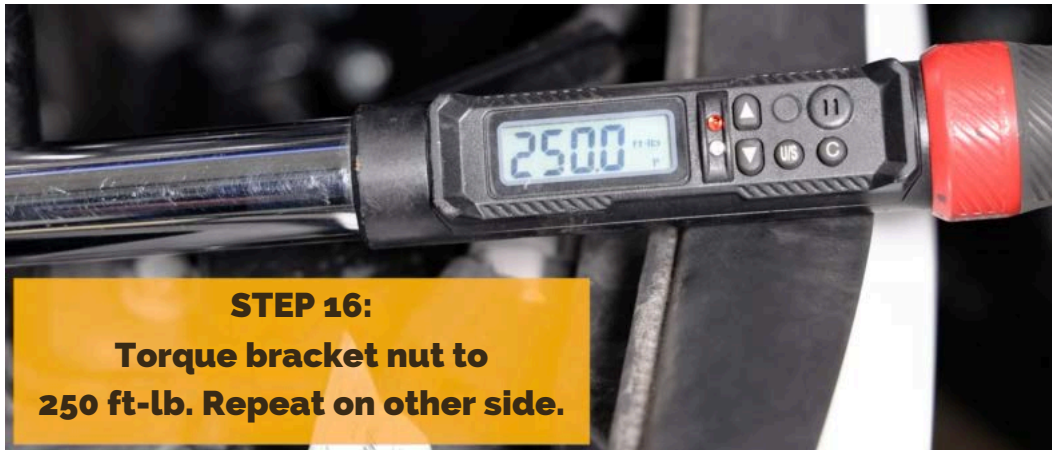

DESCRIPTION: U-BOLT LATCH ADJUSTMENT

SERIAL NUMBERS AFFECTED: All

U-bolts on all Ex-Guards are factory set at .625 inches [Fig. 1]. Semi truck tow hook receivers may vary from one side to another. This causes Ex-Guard brackets to be uneven once installed, making the tension on either side of the guard unequal and creating a small gap between the U-bolt and the latch hook on one side [Fig. 2].

To correct this, adjust the U-bolt on the tight side (the side with no gap [Fig. 3]) until the tension equalizes.


****Do not adjust the loose side****

To adjust:

1. Loosen the back nuts [Fig. 3 Part A] on the U-Bolt to extend it forward [red arrow].
2. Tighten the jam nuts [Fig. 3 Part B] until they are snug against the subassembly [Fig. 3 Part C].
{NOTE: Make sure the back nuts are still tight}
3. Firmly rock guard back and forth to ensure that it can no longer move.

PHONE #: (888) 651-1324

[Fig. 1]

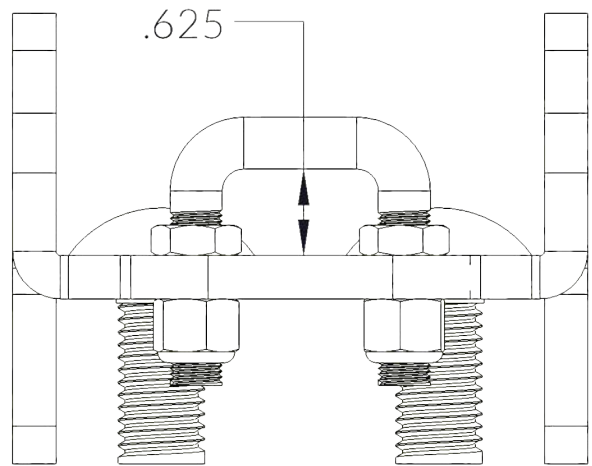

[Fig. 2]



[Fig. 3]

